Basic Manual/A5503SA

Before use
How to use the Phone
How to use the Address Book
How to use Mail
How to use the Camera
How to use EZweb
How to use EZnaviWalk
How to use FM Radio
Inputting Text
Troubleshooting
Other Features

Preface

Thank you very much for purchasing the A5503SA.

Carefully read the Manual and Basic Manual to ensure proper operation before using the A5503SA. Keep these manuals handy so that you can refer to them at any time after reading.

Contact au Customer Service Center or au shop nearest you when you lose any of these manuals.

■ Printed Manuals for A5503SA (Japanese)

The A5503SA comes with the Basic Manual and the Manual.

A5503SA Basic Manual

Equivalent to this English PDF manual.

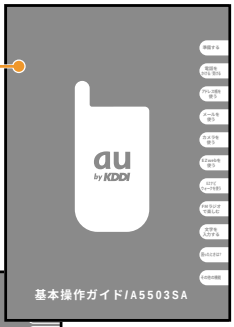

A5503SA Manual

English version is not available.

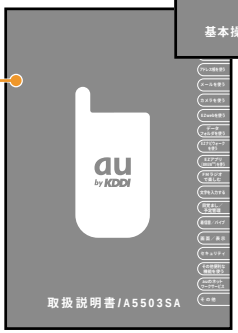

Information

Upper and lower part of screen indication may be omitted in this manual. Also, font or indication may be different from that on the actual screen or may be partly omitted.

Manners for Using Mobile Phones

■ **A mobile phone always generates weak electric waves while its power is ON.**

■ **Be considerate of the people and environment around you, and have fun using your mobile phone safely.**

● There are places where the use of mobile phones is prohibited.

- Do not use mobile phones while you are driving. Doing so is both dangerous and forbidden by law.
- Electric waves may interfere with airplane operation. Be sure to turn your mobile phone OFF before you board airplanes.

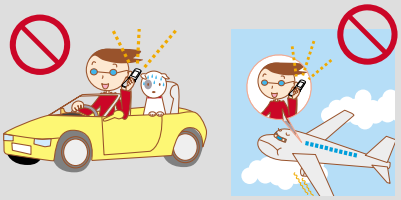

● Electric waves from mobile phones may adversely influence medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may be using a pacemaker.
  Turn your mobile phone OFF in such places.
- Abide by the instructions of hospitals and other medical institutions where it is forbidden to use or carry mobile phone.

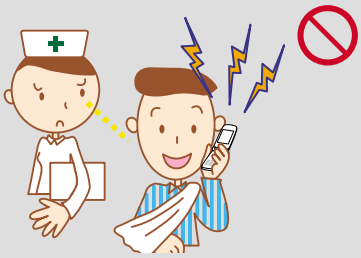

● Consider where to use your mobile phone and be careful of how loudly you talk.

- Do not place calls from cinemas, theaters, museums, libraries and other similar places. Turn your mobile phone OFF or set it to the Manner Mode to prevent others around you from being inconvenienced by ring tones for incoming calls or mails.

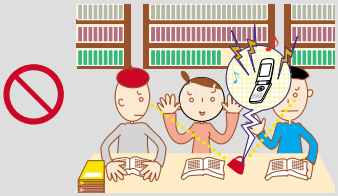

- Use your mobile phone in places where you will not prevent others from passing through.
- Move to areas where you will not cause others inconvenience on Shinkansen (bullet train) or in hotel lobbies.
- Take care not to talk too loudly during conversations.

- Get other people's permission before you start recording images with the mobile phone's camera.

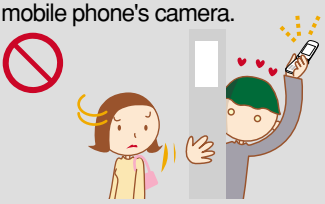

Basics of the Mobile Phone

What You Can Do with the A5503SA

Mail

You can send mails to other mobile phones or personal computers.

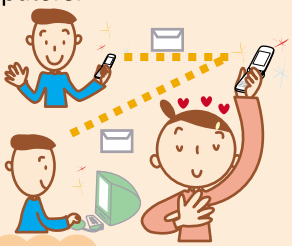

→Page 39

Camera

You can take photographs and easily send them by E-Mail.

→Page 55

EZweb(Internet)

You can access the Internet to check the news or download the Ringers and Wall Paper.

→Page 60

EZnaviWalk

You can identify where you are and follow vocal navigation aids up to your destination.

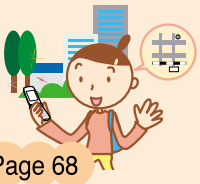

→Page 68

FM Radio

You can readily enjoy FM radio.

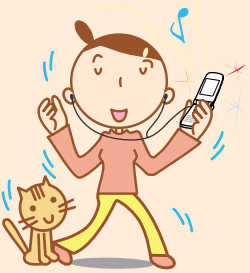

→Page 70

Useful Manner Mode and Answer Phone

■Manner Mode
- For turning sound OFF

Use this mode to turn off the Ringer to avoid annoying people around you.

Press and hold マナー クリア for over a second in the Standby Screen.

→ Page 28

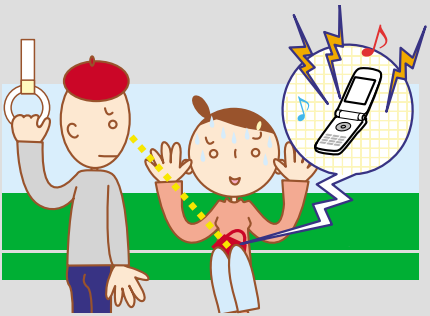

■Answer Phone
- When you cannot answer the call

The caller can record a message after the answering message when you cannot answer the call.

Press and hold バック/メモ for over a second in the Standby Screen.

→ Page 29

Check the Power, Reception and Battery

■Keep the "power" ON for usual use.

Keep the power ON to place or answer calls.

Press and hold 電源 for over a second.

→ Page 13

■You cannot talk on the phone if the "electric waves" are too weak.

It is sometimes difficult to receive electric waves in some places even in service areas.

indicates the reception state.

→ Page 13

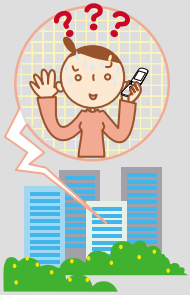

■Pay attention to the remaining "battery" power.

If the remaining battery power is too low, you may not be able to use the phone properly.

indicates the remaining battery power.

→ Page 13

Watch Out for Malicious Mails and One Ring Calls!

■ If you receive malicious mails...

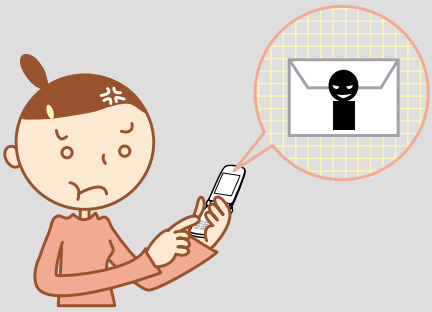

Using the mail filter function, reject particular mail or mail including "未承諾広告※ (Unsolicited Ad mail)" in the title, which is mostly malicious mail.

The following mail functions are available for preventing arrival of malicious mails:

- "未承諾広告フィルター":Rejects 未承諾広告 (unsolicited Ad) mails
- "アドレスフィルター": Rejects specified address
  - "指定受信設定" Accepts only specified mails
  - "指定拒否設定" Rejects specified mails

→ Page 49

■ If you receive a call from an unknown number...

The call leads you to call back and access vicious toll programs that may be "One Ring Call".

Incoming calls from unknown numbers that were hung up within 3 seconds are indicated by an icon with a red arrow in the Incoming Calls history.

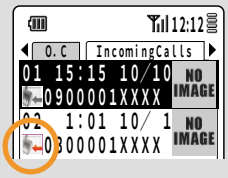

→ Page 23

Contents

Manners for Using Mobile Phones 1

Basics of the Mobile Phone 2

What You Can Do with the A5503SA 2
Useful Manner Mode and Answer Phone 3
Check the Power, Reception and Battery 4
Watch Out for Malicious Mails and One Ring Calls! 5

Contents 6

Before use 8

Confirming the Packed Contents 8
How to Read This Manual 9
Names of Each Part 10
Charging the Battery Pack 11
Extending the Antenna 12
Conecting SANYO Flat-type Stereo Earphone 01 12
Turning the Power ON 13
Turning the Power OFF 13
About Initial Settings 13
Switching the Screen Display to English 14
Understanding Basic Usage of the Phone 16
Icon Display 19
Initializing E-Mail and EZweb Functions 20
Confirming Your Phone Number and E-Mail Address 21

How to use the Phone 22

Placing a Call 22
Answering a Call 22
Calling Back (Outgoing Calls/Incoming Calls) 23
Countermeasure for One Ring Calls 23
Changing Ringer Type 24
Adjusting Ringer Volume 26
Setting the Manner Mode 28
Adjusting the Other Party's Voice Volume 29
Recording Messages When You Are Unable to Answer a Call 29
Playing Back/Erasing Recorded Messages 30

How to use the Address Book 32

Saving in the Address Book 32
Placing a Call to a Saved Phone Number 35
Editing the Address Book Data 36
Registering Data from the Outgoing/Incoming Calls 38

How to use Mail 39
Using E-Mail Features 39
Changing Your E-Mail Address 40
Creating and Sending E-Mail 42
Reading Received E-Mail 45
Replying to Received E-Mail 46
Reading E-Mail from the Inbox 48
Blocking Malicious Mail 49
Using C-Mail Features 50
Creating and Sending C-Mail 51
Reading Received C-Mail 53
Reading C-Mail from the Inbox 54
How to use the Camera 55
Taking a Still Image (Photo) 55
Recording a Moving Image (Movie) 56
Viewing Taken/Recorded Images 58
Attaching a Photo or Movie to an E-Mail Message 59
Photo Mail 59
How to use EZweb 60
EZweb (Internet) 60
Understanding Basic Operations 61
Viewing an Informational Site 62
Downloading Ringers 63
Saving Frequently-Accessed Sites 65
Accessing Sites Saved as Bookmarks 66
Confirming Charges 67
How to use EZnaviWalk 68
Displaying a Map of the Place Where You Are 68
Registering Your Home as the Place Where You Are 69
How to use FM Radio 70
Listening to FM Radio 70
Inputting Text 72
Switching Over the Input Mode 72
Entering Kana 72
Entering Kanji 74
Entering E-Mail Addresses 75
Entering Pictographs 77
Inputting Fixed Expressions 78
Troubleshooting 79
Other Features 80
INDEX 81

Confirming the Packed Contents

The A5503SA main unit and accessories are included in the package.

A5503SA Main Unit

Battery Pack

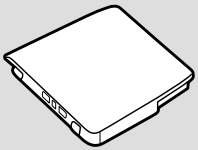

SANYO AC Adapter 03

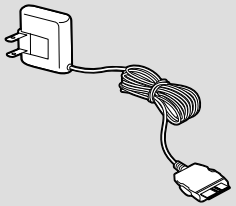

Desktop Holder

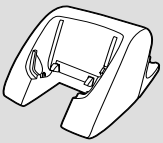

SANYO Flat-type Stereo Earphone 01

Strap

Warranty

Precautions on Use (Japanese)

Basic Manual (Japanese)

Manual (Japanese)

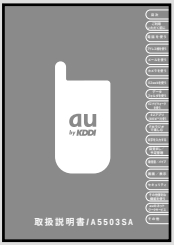

How to Read This Manual

Title **Contents of operation** **Key layout**

Operation number

Operation results

Index
The index position shifts for each chapter.
This is useful for locating the page you wish to read.

Registering Data from the Outgoing/Incoming Calls

The phone number of an outgoing or incoming call can be registered in the Address Book.

1 **Press ○ or ○ in the Standby Screen.**

► The Outgoing or Incoming Calls history appears.

Outgoing Calls

2 **Use ○ to select the phone number to register and press** (アプリ SUB).

3 **Use ○ to select "Reg.to Adrs.Bk." and press ○ (OK).**

"Register New": Register new data to the Address Book.
"Add'l Register": Add or Edit existing data and then register to the Address Book.

4 **Use ○ to select "Register New" and press ○ (OK).**

► The Classify Phone # selection screen appears.

For the subsequent procedure, see Steps 6 to 10 on page 33.

Page 38

Supplementary description

Screen after operation (Example)

Names of Each Part

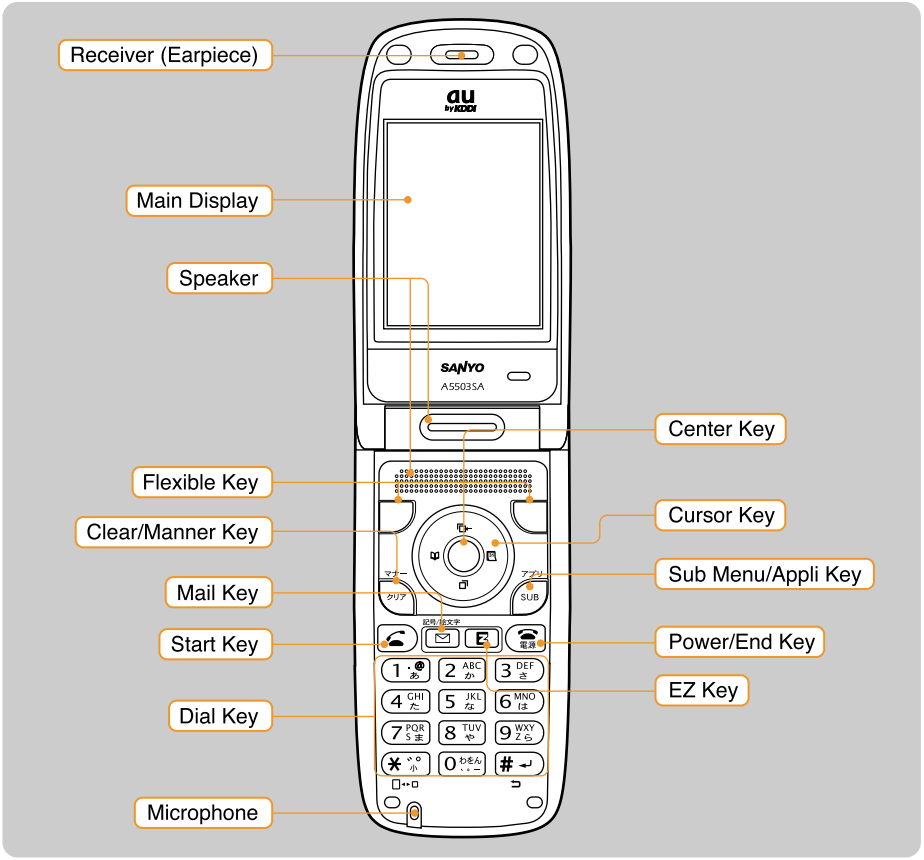

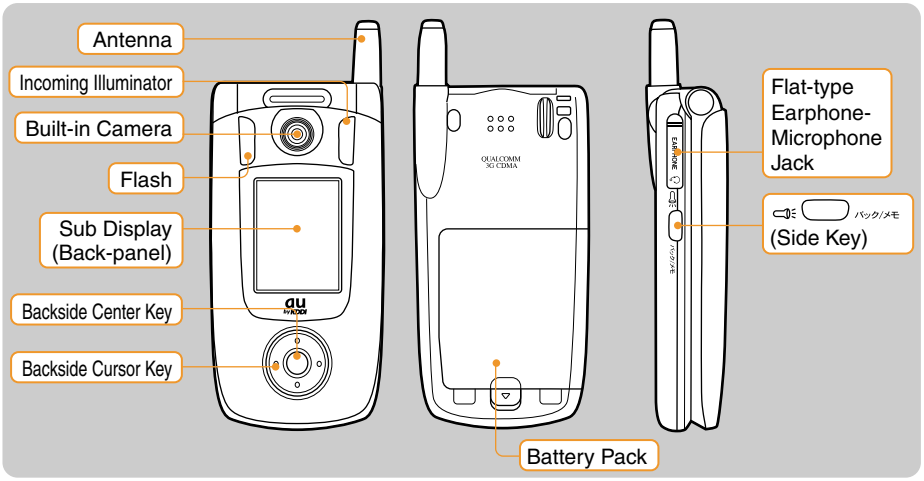

Charging the Battery Pack

The battery pack is not fully charged at the time of purchase.
Be sure to charge the battery pack with the exclusive charger when you use the A5503SA for the first time or after a long break.

■How to charge the Battery Pack

1 Connect the SANYO AC Adapter 03 to the Desktop Holder.

2 Plug the power plug of the SANYO AC Adapter 03 into an AC outlet.

3 Attach the A5503SA on which the Battery Pack is installed to the Desktop Holder.

To detach, hold down the Desktop Holder and detach it.

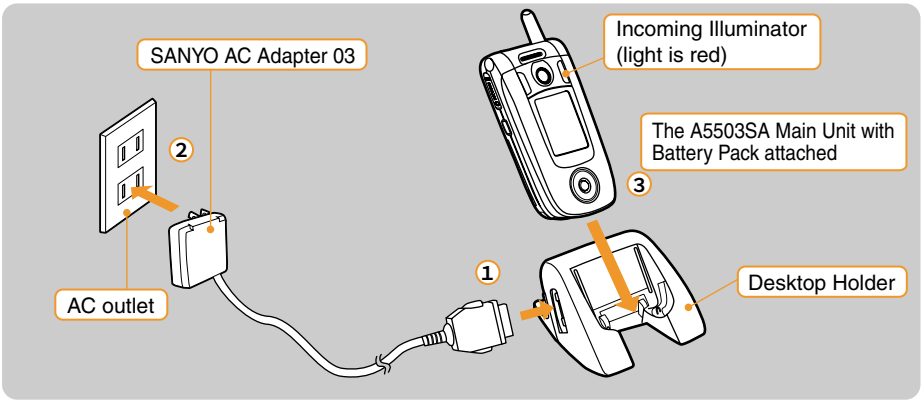

- **Incoming Illuminator red light stays lit → charge in progress**
- **The light goes off → charge completed**

Information

The battery charger can also be charged by directly inserting the SANYO AC Adapter 03 connector into the external connection terminal on the A5503SA Main Unit.

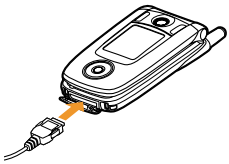

Extending the Antenna

Hold the tip of the antenna and pull out until it stops.

● Extending the antenna

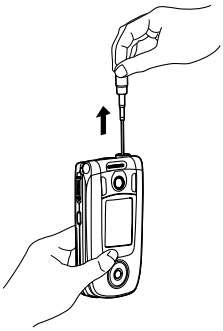

If the antenna is not extended far enough, it loses sensitivity and may fail to pick up a sufficient signal.

● Retracting the antenna

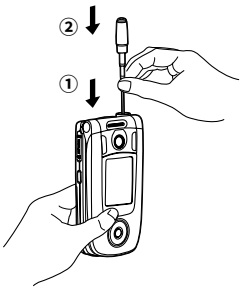

Hold the lower part of the antenna and push straight down (①), then hold the upper part of the antenna and push straight down (②). Attempting to retract by force while holding the upper part, it may result in damage.

Information

Do not touch the antenna or entangle it in the metal strap, as these actions may result in weak electric waves.

Connecting SANYO Flat-type Stereo Earphone 01

Turn the cover of the flat-type earphone-microphone jack 180 degrees (①), and then connect the accompanying SANYO Flat-type Stereo Earphone 01 to the jack (②). An attempt to force connection without turning the cover may lead to breakage. Insert the earphone-microphone correctly, orienting it as shown in the figure.

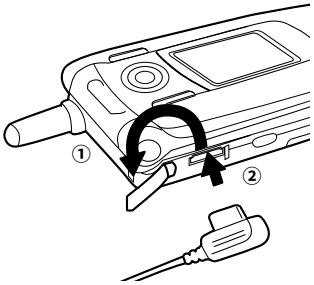

Turning the Power ON

To use the phone and mail functions, turn the power ON to display the Standby Screen.

1 Press and hold 電源 for over a second.

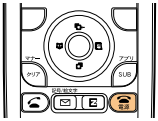

<Standby Screen>

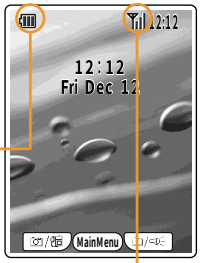

When the power is turned ON, the au logo is displayed and the Standby Screen appears.

Check the battery level.

High	Medium	Low	Zero

Check the electric wave reception.

Strong	Mid	Weak	Very weak	Out	OFF
Strong	Mid	Weak	Very weak	Out of service area	Electric wave OFF

- When "Out" or "OFF" is displayed, you cannot use the functions with the electric wave reception.
- When "Y" is displayed, you may not be able to use the functions with the electric wave reception.

Turning the Power OFF

1 Press and hold 電源 for over a second.

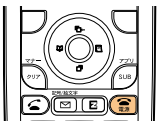

Keep the power ON to answer calls.

About Initial Settings

When purchased, A5503SA is configured with the following initial settings.

LockNo.		1234	
Font Size	Entry Size	Large	
	Mail Display	Large	
	EZweb Display	Small	
	AddressBookList	Large	
	Phone Number Entry	Large	
Number Notice		ON	
Call Notice		Ringer: "Mio Babbino Caro"	Vibrator: OFF
		Image: Simple	Lamp: PriorData Color3

Switching the Screen Display to English

Menus, messages and other screen displays can be switched to either Japanese or English.

1 Press (メインメニュー) in the Standby Screen.

► The メインメニュー (Main Menu) appears.

2 Use to select " 基本設定 (Basic Setup)" and press (選択).

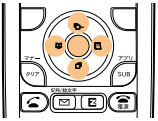

► The 基本設定(Basic Setup) screen appears.

3 Use to select "ﾕｰｻﾞｰ補助 (User Support)" and press (選択).

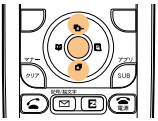

► The ﾕｰｻﾞｰ補助 (User Support setting) screen appears.

4 Use ◉ to select "Set Language" and press ◉ (選択).

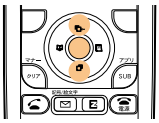

► The Set Language setting screen appears.

5 Use ◉ to select "English" and press ◉ (Set).

► The screen display is set to English.

Understanding Basic Usage of the Phone

■ Basic operation

Various functions and settings of the A5503SA can be accessed from the MainMenu. Use the Cursor Key ( ) on the MainMenu to select the item, then press the Center Key ( ) to determine and access the selected function.

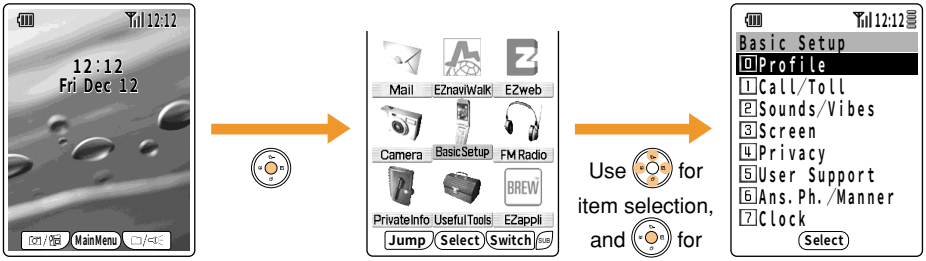

<Standby Screen> <Main Menu>

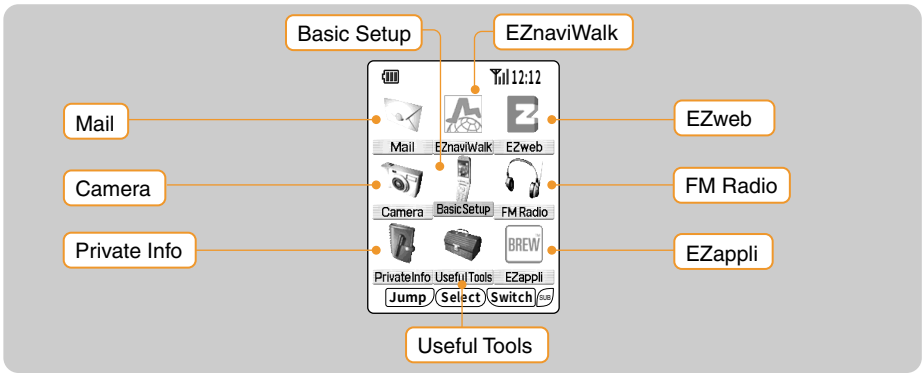

In this Basic Manual, usage of the cursor and center keys is indicated as follows.

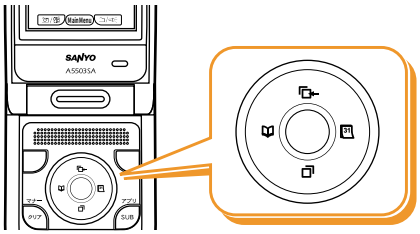

(Example) Press the Up or Down Key →

Press the Left or Right Key→

■Using the Sub-Menu

While SUB is displayed on a function setup screen or character entry screen, pressing アプリ SUB displays the Sub Menu for the relevant function, allowing various operations associated with that function.

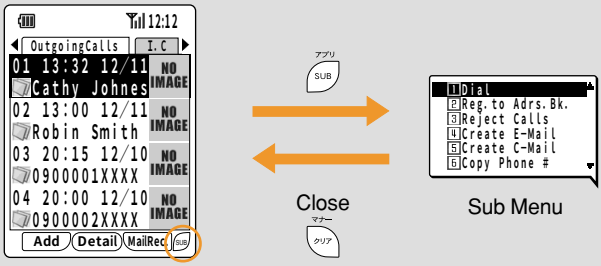

■Operations With the Main Body Folded

Pressing the backside center key enables you to work with the MainMenu on the sub-display. Use the backside cursor key () to select an item, and the backside center key () to set it. Pressing the side key (バック/メモ) in standby mode causes the current time to be announced.

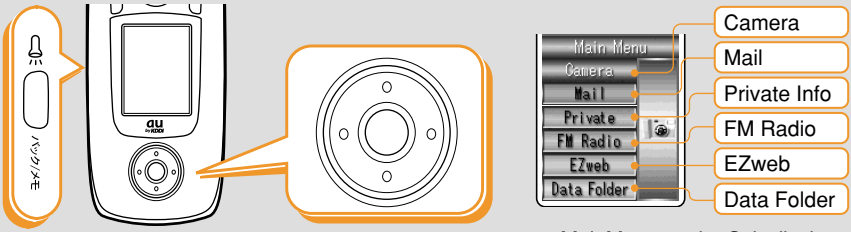

MainMenu on the Sub-display

Information

When you are lost in operation or have made mistakes, press the side key (バック/メモ) or the backside cursor key () to return to the previous screen.

■ Flexible key

Use for operate items indicated in the lower part of the Main Display.
The items displayed may differ depending on the screen.

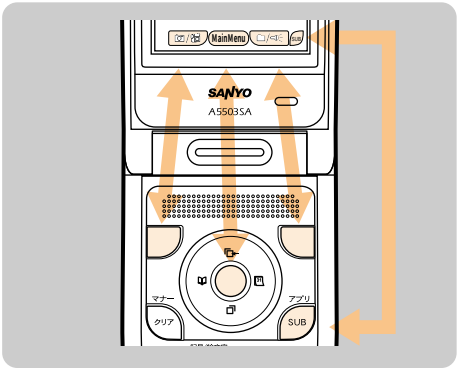

In the case shown in the figure on the left:
Press the key shown on the right for the function on the left, in the figure below:

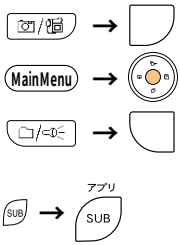

■ How to use the keys

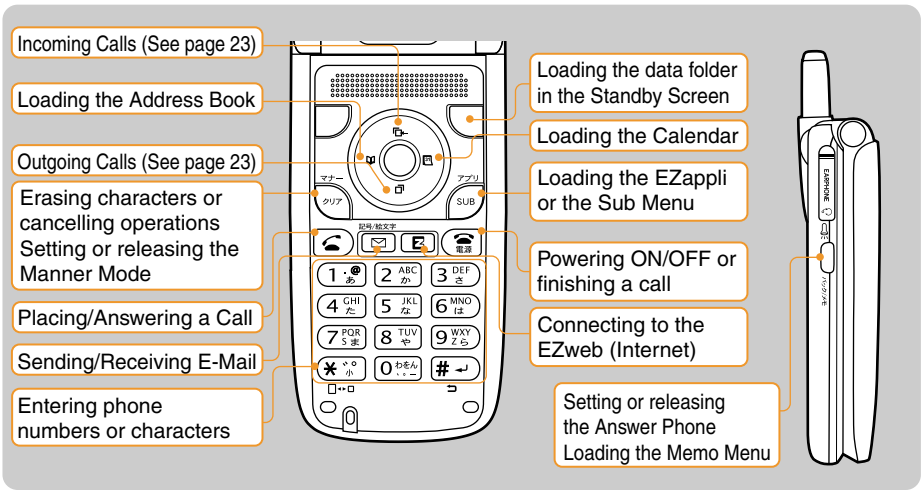

Information

Press マナー クリア to return to the previous screen when you get confused or make a wrong operation. Press 電源 to return to the Standby Screen.

Icon Display

Incoming Mails or status of the function settings can be checked by icons (pictures indicating status). It is useful to remember the main icons.

■ General icon display

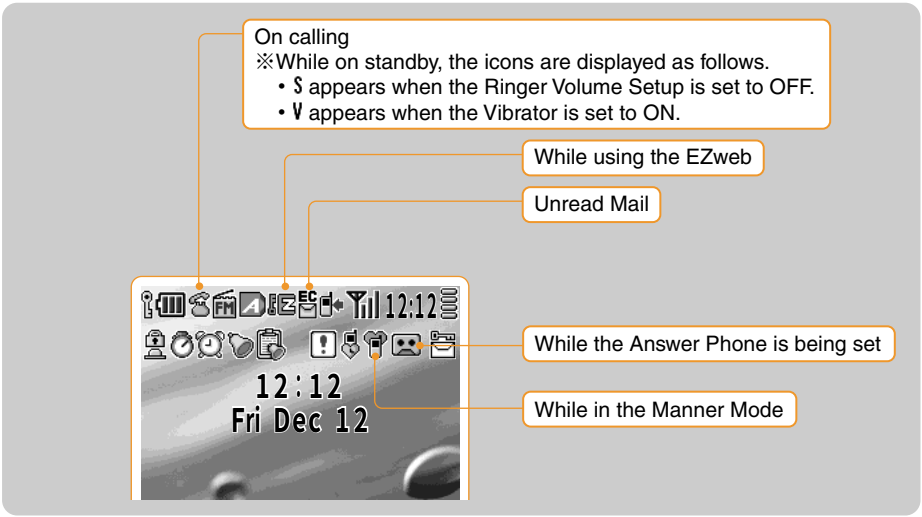

Initializing E-Mail and EZweb Functions

A subscription for the EZweb (Internet) service is required to use the E-Mail and EZweb (Internet) services. Please contact an au Customer Service Center or an au shop if you did not subscribe for the service at the time of purchase.

Be sure to perform initialization before using the E-Mail and EZweb services. Initialization automatically provides your E-Mail address. To change that E-Mail address to your preferred address, see page 40.

1 Press ✉, E or SUB (アプリ) in the Standby Screen.

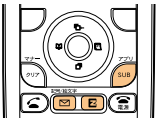

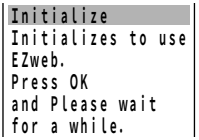

2 Press ● (OK).



► Wait for a while until the screen on the right appears.



3 Press ● (OK).

► The screen that appears varies depending on the key you pressed in Step 1.

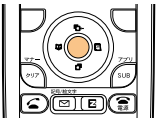

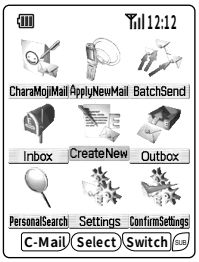

When press ✉

When press E

When press SUB (アプリ)

Confirming Your Phone Number and E-Mail Address

Your phone number and E-Mail address can be confirmed.

1 Press (MainMenu) in the Standby Screen.

2 Use to select "Private Info" and press (Select).

► The Private Info Screen appears.

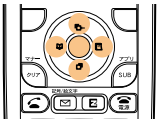

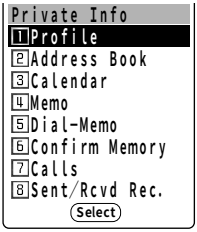

3 Use to select "Profile" and press (Select).

► The Profile appears and your phone number and E-Mail address can be confirmed.

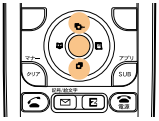

Information

In the Standby Screen, your phone number and E-Mail address can also be confirmed by pressing (MainMenu), and then 0わを.

How to use the Phone

Let's understand basic usage of the phone.

Placing a Call

Dial the phone number to place a call.

1 Use the 0わを - 9WXYZら to enter the receiver's phone number and press .

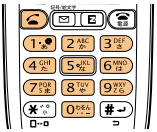

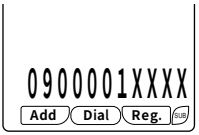

Press 電源 to hang up.

- **Placing a call to a landline telephone**
  Enter the phone number starting with the area code.
- **Placing a call to a mobile phone, car phone, or PHS**
  Always enter the whole (11-digit) phone number.
- **How to Place a Call**

Add "184" before the phone number:	Your phone number is not displayed for the receiver.
Add "186" before the phone number:	Your phone number is displayed for the receiver.
Add nothing:	The call is placed in accordance with the Number Notice (Caller ID) setting.

Press (Add) to add 184 or 186.

Answering a Call

The Ringer sounds and the Incoming Illuminator flashes when receiving a call.
It works in accordance with the settings when the Manner Mode is set to ON. See page 28.

1 Press during incoming call and answer it.

Press 電源 to hang up.

Screen displays for incoming phone calls

The caller's phone number **Example: "0900002XXXX"**	The caller has set the phone number to be displayed. The caller's name is also displayed if the caller's information is registered in your Address Book.
"ID Unsent"	The caller has set the phone number not to be displayed.
"Payphone"	The call is placed from a payphone.
"Not Support"	The call is placed from a phone that does not support ID notification.

Screen display if the call is not answered

The message shows that there were unanswered incoming calls when you could not answer the call. Press (Confirm) and (OK) on that screen to confirm the caller's phone number and call back. See page 23.



Calling Back (Outgoing Calls/Incoming Calls)

The previously called (Outgoing Calls) or previously received call with a caller's phone number (Incoming Calls) can be used for calling back.
Up to 20 phone numbers can be recorded to each history.

1 Press ○ or ○ in the Standby Screen.

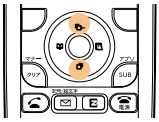

Pressing ○ displays the Outgoing Calls.
Pressing ○ displays the Incoming Calls.

The phone number of last called or received call is displayed first.

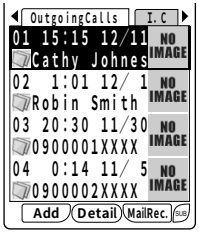

Outgoing Calls

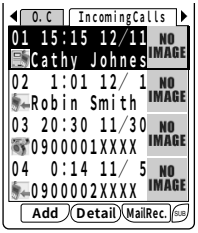

Incoming Calls

2 Use ○ to select the phone number and press ☎.

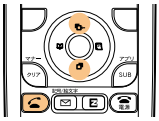

A call is placed to the selected phone number.

Countermeasure for One Ring Calls

■ What are One Ring Calls?

One Ring Call is a vicious act in which a call is hung up after only 1 ring so as to be left in the Incoming Calls history. Receivers who call back will access programs for which they must pay.

■ Icon as a countermeasure for One Ring Calls

With A5503SA, one-ring calls are indicated with (a red arrow) in the Incoming Calls history. Be careful if you are not familiar with such phone numbers.



Changing Ringer Type

A type of ringer can be selected for incoming calls.

1 **Press (MainMenu) in the Standby Screen.**

► The MainMenu appears.

2 **Use to select "Basic Setup" and press (Select).**

► The Basic Setup screen appears.

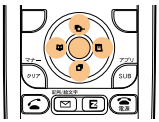

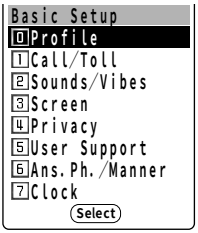

3 **Use to select "Sounds/ Vibes" and press (Select).**

► The Sounds/Vibes setting screen appears.

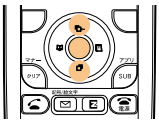

4 **Use to select "Ringer/Vibes" and press (Select).**

► The Ringer/Vibes setting screen appears.

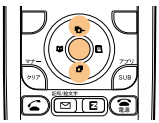

5 Use ○ to select "Call Notice" and press ○ (Select).

► The Call Notice setting screen appears.

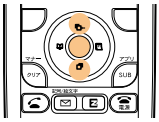

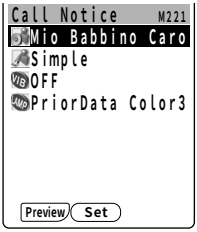

6 Use ○ to select "♪" and press ○ (Set).

► The folder selection screen appears.

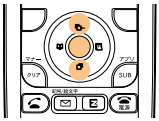

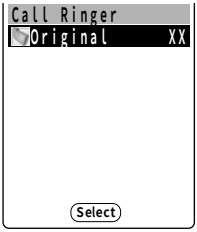

7 Press ○ (Select).

► The ringer selection screen appears.

Honeysuckle (JASRAC T-0300249)

8 Use ○ to select a melody (ringer) and press ○ (Set).

► The Ringer is set.

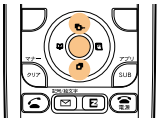

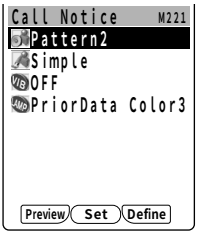

9 Press ▭ (Define).

Pressing ▭ (Preview) plays back the selected ringer.

Adjusting Ringer Volume

Incoming call sound (Ringer) volume can be adjusted.

1 Press (MainMenu) in the Standby Screen.

► The MainMenu appears.

2 Use to select "Basic Setup" and press (Select).

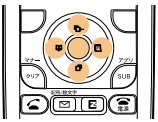

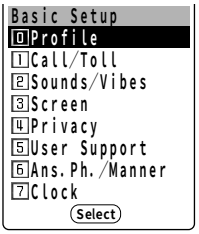

► The Basic Setup screen appears.

3 Use to select "Sounds/Vibes" and press (Select).

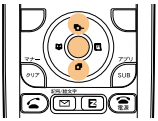

► The Sounds/Vibes setting screen appears.

4 Use to select "Speaker Volume" and press (Select).

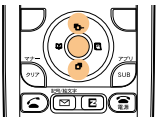

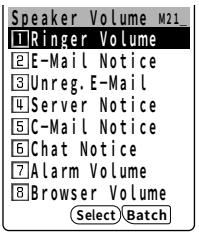

► The Speaker Volume setting screen appears.

5 Use ○ to select "Ringer Volume" and press ○ (Select).



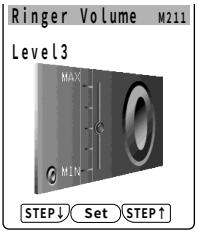

► The Ringer Volume setting screen appears.

6 Use ○ to adjust volume and press ○ (Set).

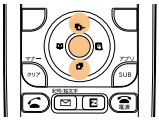

Pressing ○ raises the volume.

Pressing ○ lowers the volume.

There are 5 levels for ringer volume. Gradually raises/lowers "STEP ↑" / "STEP ↓" or no ringer sounds "OFF" can also be selected.

Information

Use ○ to also change the ringer volume during an incoming call. The ringer volume cannot be adjusted when the Manner Mode is set to ON.

Setting the Manner Mode

The sound such as Ringer does not sound when the Manner Mode is set to ON.
The A5503SA notifies you of the incoming call by vibrate (Vibrator).
Example: Set the Silent Vibe and Continuous modes.

1 Press and hold マナー クリア for over a second in the Standby Screen.

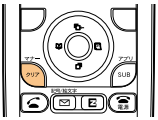

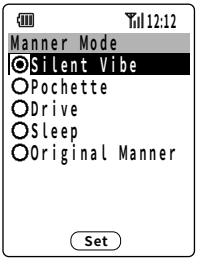

2 Use ◎ to select "Silent Vibe" and press ● (Set).

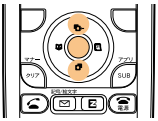

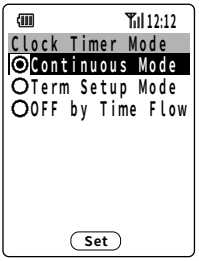

3 Use ◎ to select "Continuous Mode" and press ● (Set).

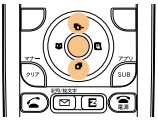

► "SV" and " " appear on the screen.
The Answer Phone is set at the same time, and " " appears on the screen.

To release the Manner Mode

Press and hold マナー クリア for over a second when the Manner Mode is set to ON.

► "SV" and " " disappear when released from the Manner Mode. The Answer Phone is released at the same time, and " " disappears.

Adjusting the Other Party's Voice Volume

The other party's voice volume can be adjusted in 9 levels during the call.

1 Use ◎ to adjust volume during a call.

Pressing ◎ raises the volume.
Pressing ◎ lowers the volume.

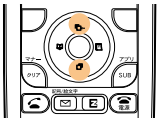

Recording Messages When You Are Unable to Answer a Call

The A5503SA can be answered automatically with a prerecorded message and caller's message can be recorded when you are unable to answer a call (Answer Phone).
The Answer Phone can record up to 3 calls, and for about 20 seconds per call.

1 Press and hold the Side Key (バック/メモ) for over a second in the Standby Screen.

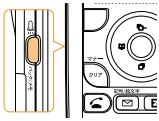

► The Answer Phone is set and " " appears on the screen.

To release the Answer Phone

Press and hold the Side Key (バック/メモ) for over a second in the Standby Screen.

Information

- Use Voice Mail when you have turned off the power or where radio waves are blocked.
- Erase messages after playing them back. See page 30.
- Up to 3 Answer Phone including Phone Memo can be recorded.

Playing Back/Erasing Recorded Messages

The Answer Phone recorded messages can be played back or erased.

When you are unable to answer a call, the Answer Phone records the caller's messages.

When an Answer Phone memo is recorded:

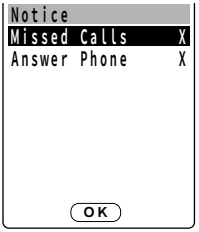

- On the notification screen that appears in the Standby Screen, press ● (Confirm).

1 Use ● to select "Answer Phone X" and press ● (OK).

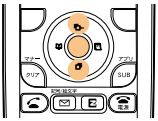

- The Ans.Ph./Ph. Memo selection screen appears.

2 Use ● to select the recorded message to play back and press ● (Play).

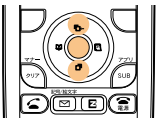

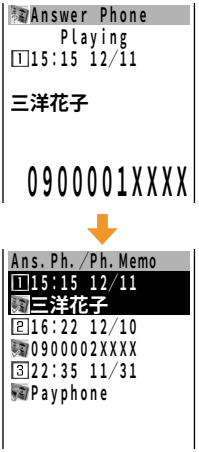

- The recorded message is played back.
- The Ans.Ph./Ph. Memo selection screen returns when play back is completed.

3 Use ○ to select the memo that you played back, and then press SUB (アプリ).

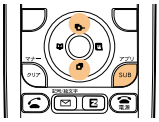

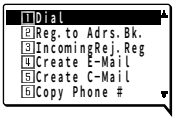

4 Use ○ to select "Erase", and press ○ (OK).

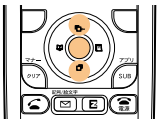



5 Use ○ to select "Erase One", and press ○ (OK).

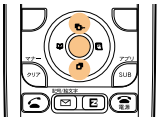

► The message is erased.

How to use the Address Book

The receiver's phone number can be loaded and a call is placed easily by saving frequently called phone numbers in the Address book.

Saving in the Address Book

Up to 500 phone numbers and E-Mail addresses can be saved.

1 Press and hold ● for over a second.

► The Address Book edit screen appears.

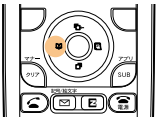

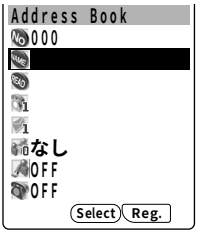

2 Use ● to select "NAME" (Name) and press ● (Select).

► The Name input screen appears.

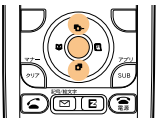



3 Enter a name and press ● (OK).

► The READ is automatically entered.

For the method of Inputting text, see page 72.

4 Use ● to select "1" (Phone Number 1) and press ● (Select).

► The Phone Number input screen appears.

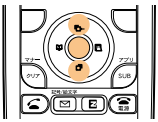

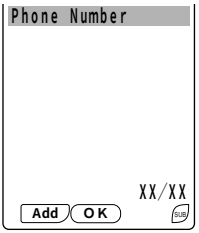

5 Enter a phone number and press (OK).

► The Classify Phone # selection screen appears.

Enter the area code when saving a landline telephone number. Be sure to enter an 11-digit phone number when saving a mobile phone or PHS number.

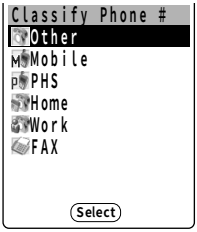

6 Use to select classify and press (Select).

► The Address Book edit screen returns.

When you do not enter any E-Mail addresses, go to Step 10.

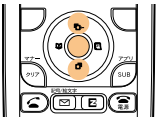

7 Use to select "1" (E-Mail Address 1) and press (Select).

► The E-Mail Address input screen appears.



8 Enter an E-Mail address and press (OK).

► The Classify E-Mail selection screen appears.

For the method of entering E-Mail addresses, see page 75.

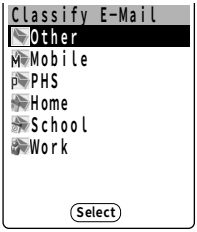

Continued on the next page

9 Use ○ to select classify and press ○ (Select).

► The Address Book edit screen returns.

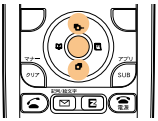

10 Press ▭ (Reg.).

► The number of memory left and the option items left appears.

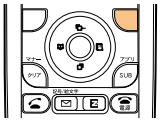

Information

The smallest empty No. between 000 and 499 is automatically saved in the memory.

Placing a Call to a Saved Phone Number

Saved phone number in the Address Book can be loaded and a call is placed to that number.

1 Press ● in the Standby Screen.

► The Address Book screen appears.

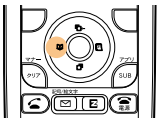

2 Use ● to switch between headings (ア, カ, サ, タ, ナ, etc.).

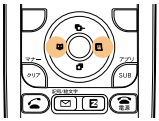

3 Use ● to select the number to call.

Pressing ● (Detail) displays the Address Book detail screen to confirm the saved contents such as phone numbers and E-Mail addresses.

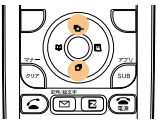

4 Press ☎.

► A call is placed to the selected phone number.

A call is placed to the number with Usual when the selected Address Book data has more than 1 phone number.

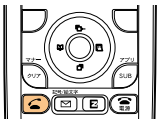

Editing the Address Book Data

The saved data in the Address Book can be edited.

Example: To change a phone number

1 Press ● in the Standby Screen.

► The Address Book screen appears.

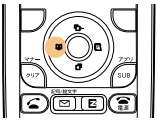

2 Use ● to switch between headings (ア, カ, サ, タ, ナ, etc.), and use ● to select the data to edit.

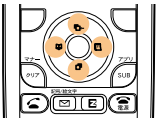

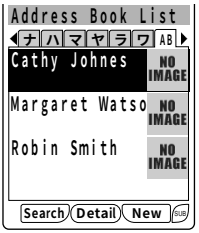

3 Press ● (Detail).

► The detail screen of the Address Book appears.

The saved contents including phone numbers and E-Mail addresses can be confirmed.

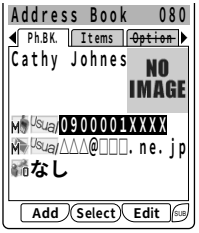

4 Press ⌐ (Edit).

► The Address Book edit screen appears.

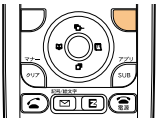

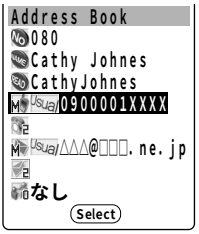

5 Use ○ to select "M" (a phone number) and press ○ (Select).

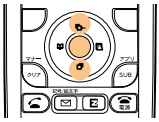

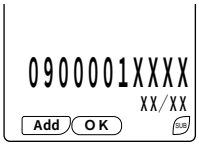

6 Edit data and press ○ (OK).

Pressing クリア (マナー) erases the saved characters.

Press and hold クリア (マナー) for over a second erases all characters.

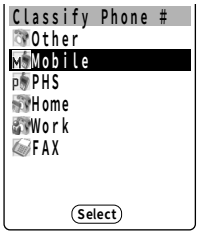

7 Use ○ to select classify and press ○ (Select).

► The Address Book edit screen returns.

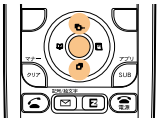

8 Press ▭ (Reg.).

► The overwrite confirmation screen appears.

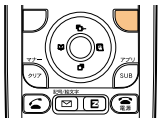



9 Use ○ to select "Yes" and press ○ (OK).

► The Address Book data is edited.

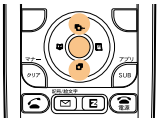

Information

To edit name, see Steps 2 and 3 on page 32.

Registering Data from the Outgoing/Incoming Calls

The phone number of an outgoing or incoming call can be registered in the Address Book.

1 Press ○ or ○ in the Standby Screen.

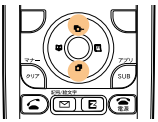

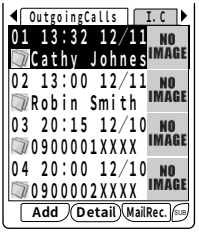

Outgoing Calls

► The Outgoing or Incoming Calls history appears.

2 Use ○ to select the phone number to register and press アプリ SUB.

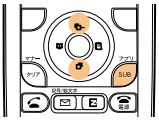

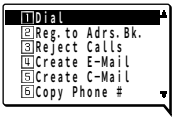

3 Use ○ to select "Reg.to Adrs.Bk." and press ○ (OK).

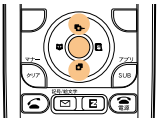

"Register New": Register new data to the Address Book.

"Add'l Register": Add or Edit existing data and then register to the Address Book.

4 Use ○ to select "Register New" and press ○ (OK).

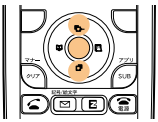

► The Classify Phone # selection screen appears.

For the subsequent procedure, see Steps 6 to 10 on page 33.

Using E-Mail Features

A subscription for the EZweb (Internet) service is required to use the E-Mail service. Please contact an au Customer Service Center or an au shop if you did not subscribe for the service at the time of purchase.

Be sure to perform initialization before using the E-Mail and EZweb services. If you have not performed initialization yet, see page 20.

E-Mail is a service that send/receive mail to/from E-Mail compatible mobile phones and personal computers by using an Internet E-Mail address. Up to 5,000 2-byte characters can be sent in an E-Mail. Still images (photos), and moving images (movies) can also be sent via E-Mail.

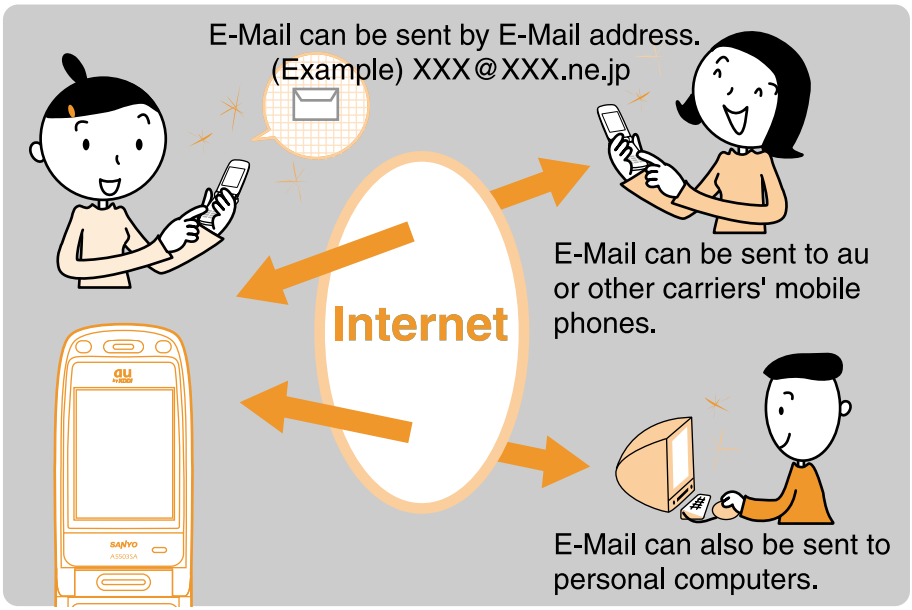

Changing Your E-Mail Address

An E-Mail address is an address for sending or receiving E-mail.
Automatically determined E-Mail Address in the Initializing can be changed to your preferred address. To confirm your current E-Mail address, see page 21.

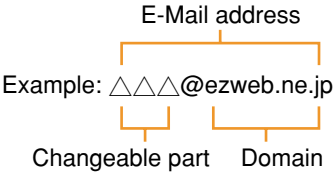

1 Press ✉ in the Standby Screen.

► The E-Mail Menu appears.

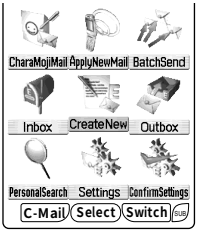

2 Use ○ to select "Settings" and press ○ (Select).

► The E-Mail Settings screen appears.



3 Use ○ to select "Other Settings" and press ○ (Select).

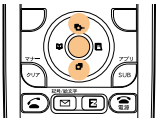

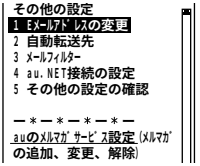

4 Use ○ to select "E メールアドレスの変更 (Change E-Mail Address)" and press ○ (Select).

► The PIN number entry screen appears.

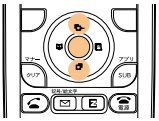

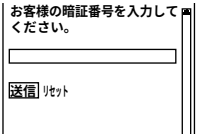

5 Enter your PIN number and select "送信 (Send)", and then press ○ (Select).

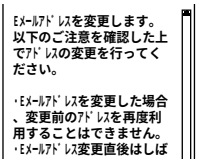

If you enter a wrong number for your PIN number three times in one day, you will not be allowed to perform setup operations until the following day.

6 Use ● to select "承諾する (Agree)" after checking the cautions, and press ● (Select).

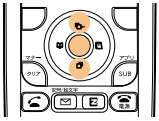

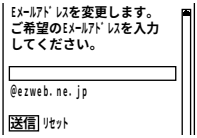

7 Use ● to select the entering area and press ● (Edit).

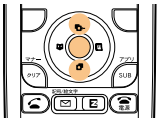

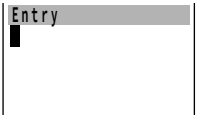

8 Enter an E-Mail address and press ● (OK).

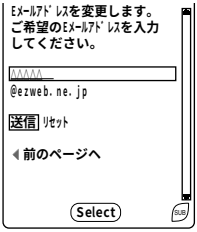

For the method of entering E-Mail addresses, see page 75.

9 Use ● to select "送信 (Send)" and press ● (Select).

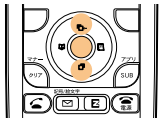

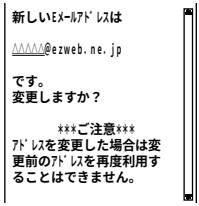

When your specified E-Mail address is not accepted

- The E-Mail address you entered is already being used. Enter a different E-Mail address.
- An invalid character is used. Be sure to use characters valid for E-Mail addresses (see page 76).

10 Use ● to select to "OK" after confirming the new address and press ● (Select).

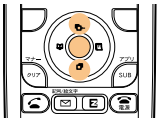

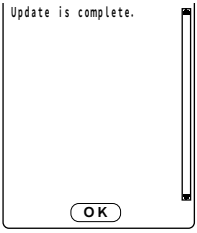

Press ● (OK) to return to the E-Mail Settings screen.

Creating and Sending E-Mail

Let's create a new E-Mail and send it.

1 Press ✉ in the Standby Screen.

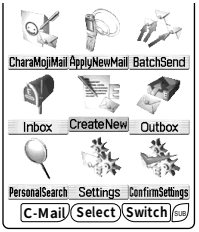

► The E-Mail Menu appears.

2 Use ○ to select "Create New" and press ○ (Select).

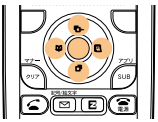

► The Create Mail screen appears.

Icons

: "To" to which you send E-Mail
: "Title" of E-Mail
: "Attached data" of E-Mail
: "Body" which is the mail contents.

3 Use ○ to select "👤" (To) and press ○ (Select).

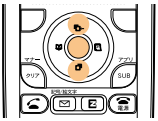



► The input method selection screen appears.

4 Use ● to select "Address Entry" and press ● (OK).

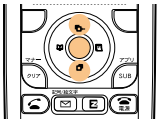

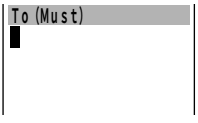

► The enter address screen appears.

To input an address, you can also load the receiver's E-Mail address from your Address Book or from SendRecords/ReceivedRecords.

There are 3 types of addresses: To, Cc, and Bcc. You can send your mail to up to 5 addresses at a time (including Cc and Bcc addresses).

5 Enter the address and press ● (OK).

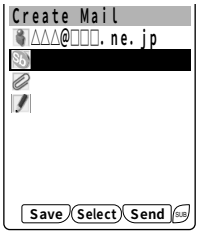

► The Create Mail screen appears again.

For the method of entering E-mail addresses, see page 75.

6 Use ● to select "Sb" (title) and press ● (Select).

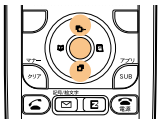

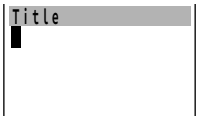

► The Title input screen appears.

7 Enter the title and press ● (OK).

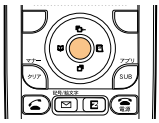

► The Create Mail screen returns.

For the method of Inputting text, see page 72.

Continued on the next page

8 Use ◎ to select "✎" (body) and press ● (Select).

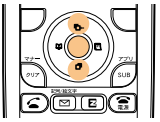

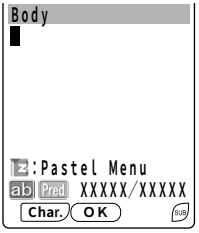

► The Body input screen appears.

9 Enter the body sentences and press ● (OK).

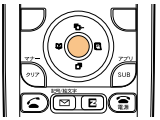

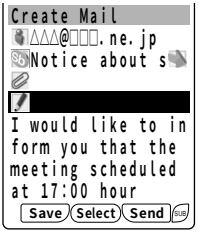

► The Create Mail screen returns.

For the method of Inputting text, see page 72.

10 Press ⌐ (Send).

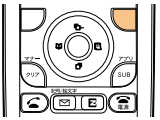

The "Photo Mail", "My Pictograph", and "Easy Pictograph" features are services that send your mail by automatically changing part of a certain address. "My Pictograph" and "Easy Pictograph" are pay services. A separate subscription is needed.

11 Use ◎ to select "Send" and press ● (OK).

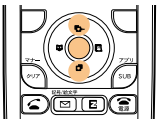

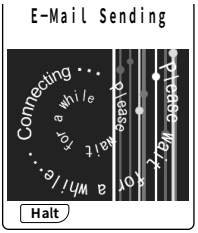



► The E-Mail is sent when the screen shown on the right appears.

Reading Received E-Mail

The received E-Mail is stored in the Inbox.

When you receive E-Mail

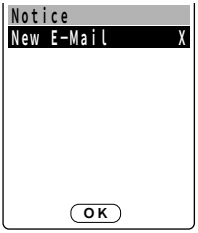

- On the notification screen that appears in the Standby Screen, press ● (Confirm).

1 Use ● to select "New E-Mail X" and press ● (OK).

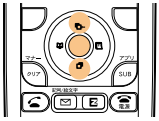

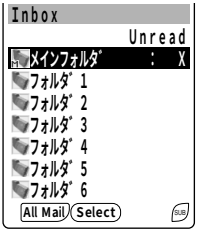

- The Inbox appears.
- The received E-Mail is usually stored in the "メインフォルダ (Main folder)".

2 Use ● to select the folder with stored new E-Mail and press ● (Select).

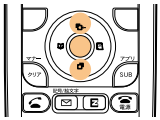

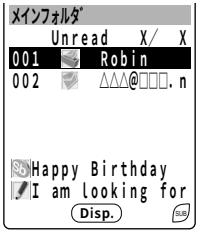

Icons

: Now-Read Mail

: Unread Mail

3 Use ● to select the new E-Mail and press ● (Disp.).

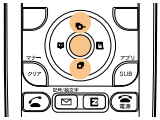

- The image (photo/movie) is played back when attached.

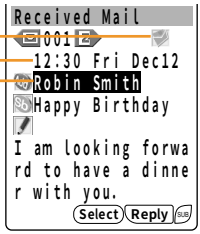

How to read the received E-Mail

Indicates the now-read mail.

Indicates the date and time of the mail is received.

Indicates the sender of the mail.

Replying to Received E-Mail

1 Press ✉ in the Standby Screen.

► The E-Mail Menu appears.

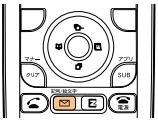

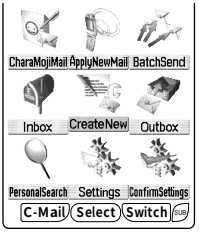

2 Use ○ to select "Inbox" and press ● (Select).

► The Inbox appears.

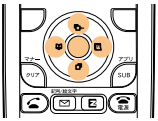

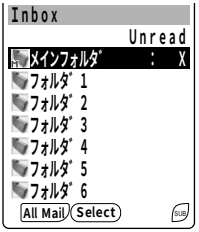

3 Use ○ to select a folder with E-Mail to reply and press ● (Select).

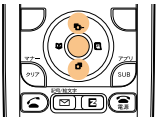

4 Use ○ to select the E-Mail to reply and press ● (Disp.).

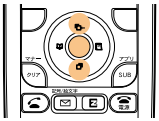

5 Press ▭ (Reply).

► The Create Mail screen appears.

"Re:" is attached at the beginning of the title and the body text of the original E-Mail is quoted.

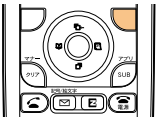

6 Use ● to select "✎" (body) and press ● (Select).

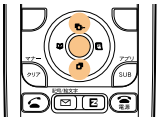

► The Body input screen appears.

7 Enter the body sentences and press ● (OK).

► The Create Mail screen appears.

For the method of Inputting text, see page 72.

8 Press ▭ (Send).

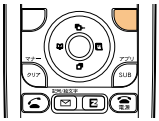

The "Photo Mail", "My Pictograph", and "Easy Pictograph" features are services that send your mail by automatically changing part of a certain address. "My Pictograph" and "Easy Pictograph" are pay services. A separate subscription is needed.

9 Use ● to select "Send" and press ● (OK).

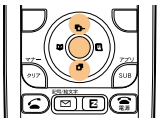

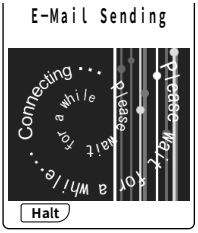

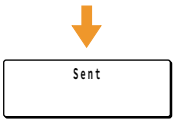

► After your E-Mail is sent, the screen on the right appears.

Reading E-Mail from the Inbox

Read E-Mail can be read from the Inbox when you read any now-read mail.

1 Press ✉ in the Standby Screen.

► The E-Mail Menu appears.

2 Use ○ to select "Inbox" and press ○ (Select).

► The Inbox appears. The number of unread messages appears in the rightmost column.

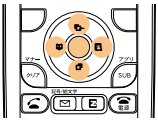

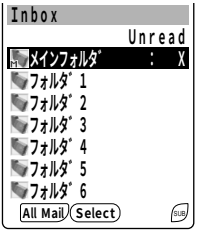

3 Use ○ to select the folder with the E-Mail to read and press ○ (Select).

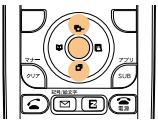

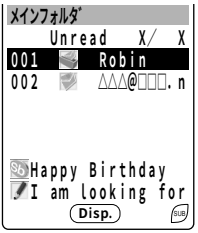

4 Use ○ to select the E-Mail to read and press ○ (Disp.).

► The body texts are displayed after automatically played back when any image (photo/movie) is attached.

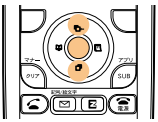

Blocking Malicious Mail

Malicious mail can be rejected with the mail filter feature.

1 **Press ✉ in the Standby Screen.**

2 **Use ● to select "Settings" and press ● (Select).**

3 **Use ● to select "Other Settings" and press ● (Select).**

4 **Use ● to select "メールフィルター (Mail Filter)" and press ● (Select).**

5 **Enter your PIN number and select "送信 (Send)", and then press ● (Select).**

► The メールフィルター (Mail Filter) screen appears.

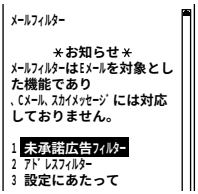

The Mail Filters for preventing from malicious mails as follows:

●未承諾広告フィルター (Unsolicited Ad mail filter)

Rejects mail including "未承諾広告※ (Unsolicited Ad mail)" in the title, which is mostly malicious mail.

●アドレスフィルター (Address filter)

- **"指定受信設定 (Specified Mail Accept)"**
  Receives mail only from specified mail addresses. E-Mail addresses to be rejected can be specified individually after registering the Specified Mail Accept.
- **"指定拒否設定 (Specified Mail Reject)"**
  Rejects mail from specified mail addresses.
- **"なりすまし規制 (Regulate Impersonation)"**
  "Impersonation mail" rejection can be set for each address filter setting.
  "Impersonation mail" is malicious mail sent via mobile phones or PHS E-Mail addresses.

The malicious mail can also be prevented by changing your E-Mail address.

Using C-Mail Features

C-Mail is a service that send/receive mail to/from C-Mail compatible au mobile phones via phone numbers. Up to 50 2-byte characters can be sent.

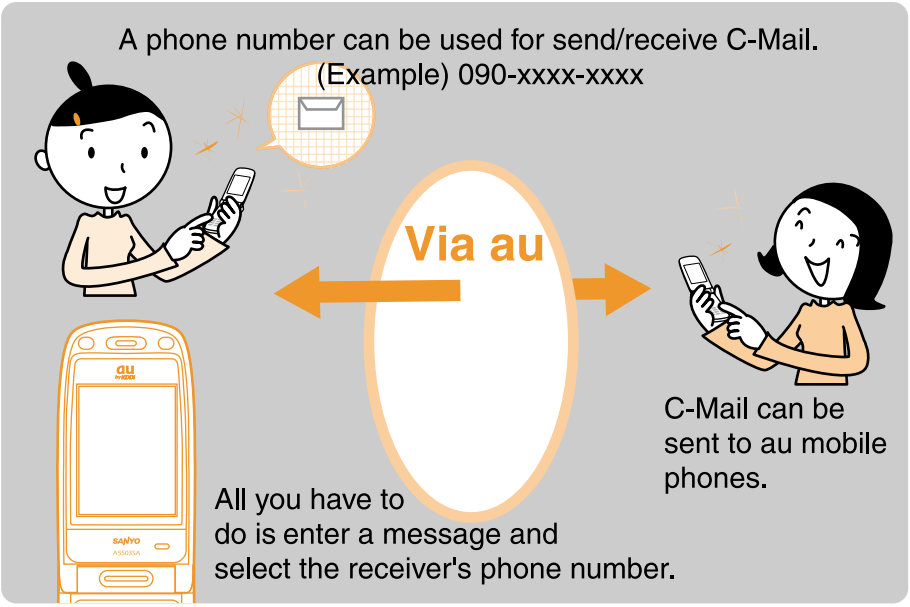

Information

- For customers in Kanto and Chubu regions, C-Mail service can be used with no subscriptions. Customers in other regions require a subscription.

Creating and Sending C-Mail

Let's create a new C-Mail and send it.

1 Press and hold ✉ for over a second in the Standby Screen.

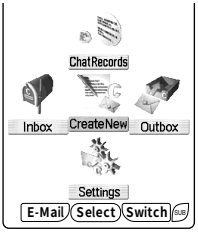

► The C-Mail Menu appears.

2 Use ● to select "Create New" and press ● (Select).

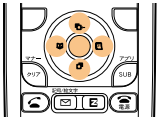



► The Body input screen appears.

3 Enter body sentences and press ● (OK).

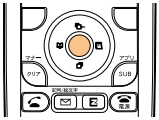

► The Create Mail screen appears.

For the method of Inputting text, see page 72.

4 Use ● to select "[image_ref id="7" box="0.394,0.646,0.421,0.668]" (receiver) and press ● (Edit).

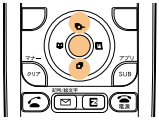



► The Select Send Method screen appears.

Sending methods

"Usual": Sends mail to C-Mail compatible au mobile phones.

"Chat": Sends mail in the chat mode as send and receive mail continuously.

Continued on the next page

5 Use ● to select "Usual" and press ● (Select).

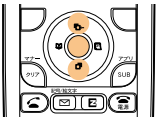

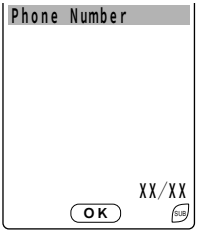

► The Phone Number input screen appears.

6 Enter the Phone Number and press ● (OK).

The phone number can be loaded and entered from the Address Book, Outgoing Calls or Incoming Calls record by pressing SUB (アプリ).

7 Press ▭ (Send).

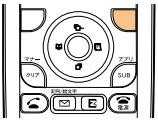

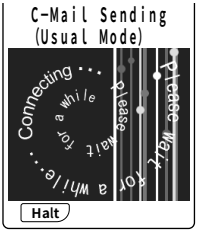

After your C-Mail is sent, the screen on the right appears.

Information

184/186 cannot be added to the receiver's phone number.

Reading Received C-Mail

The received C-Mail is stored in the Inbox.

When you receive C-Mail

On the notification screen that appears in the Standby Screen, press (Confirm).

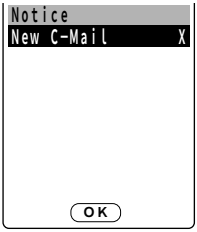

1 Use to select "New C-Mail X" and press (OK).

The Inbox appears.

The received C-Mail is usually stored in the "メインフォルダ (Main folder)".

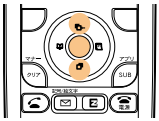

2 Use to select the folder with stored new C-Mail and press (Select).

Icons

: Unread Mail

: Now-Read Mail

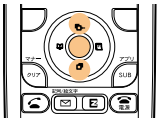

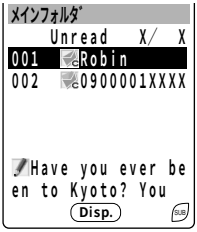

3 Use to select the new C-Mail and press (Disp.).

The mail contents appears.

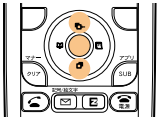

Reading C-Mail from the Inbox

Read C-Mail can be read from the Inbox when you read any now-read mail.

1 Press and hold ✉ for over a second in the Standby Screen.

► The C-Mail Menu appears.

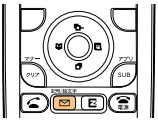

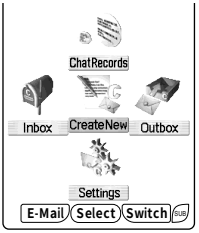

2 Use ● to select "Inbox" and press ● (Select).

► The Inbox appears. The number of unread messages appears in the rightmost column.



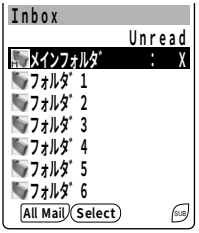

3 Use ● to select the folder with the C-Mail to read and press ● (Select).

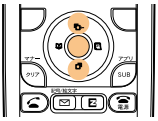

4 Use ● to select the C-Mail to read and press ● (Disp.).

► The mail contents appears.

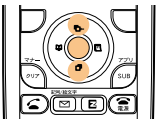

How to use the Camera

Still images (photos) can be taken and moving images (movies) can be recorded by using the A5503SA camera feature.
The saved photos or movies can be attached to E-Mail and sent.

Taking a Still Image (Photo)

Use the Standby Screen as a monitor for taking a photo, and direct the lens to the object.

1 Press ( ) in the Standby Screen.

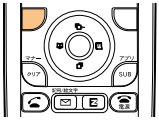

- The image is displayed on the main display.
- Pressing switches between 16 zoom levels.
- Pressing ( ) turns the light or flash ON/OFF.

2 Determine the photographing range and press (Shoot).

- You will hear the shutter sound and the photo appears as a still image (Preview screen).
- Press マナー クリア to re-take a photo.

Continued on the next page

3 Press (Save).

► A message appears that the saving operation is in progress, and the photo is saved.

Information

- Photos are saved in the "MyPhoto" folder of the Data folder.
- The title of the photo is saved in the form of "photographing date_photographing time~consecutive numbers".
  For example, the title of a photo taken at 12:12 on December 12, 2003, would be "031212_1212~01".

Recording a Moving Image (Movie)

Use the Standby Screen as a monitor for recording a movie, and direct the lens to the object.

1 Press and hold (/) for over a second in the Standby Screen.

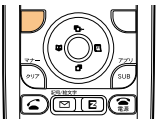

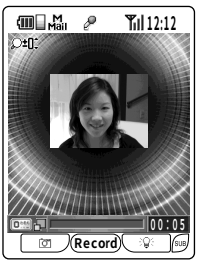

► The image is displayed on the main display.

Pressing switches between 16 zoom levels.

Pressing ( ) turns the light ON/OFF.

2 Determine the photographing range and press (Record).

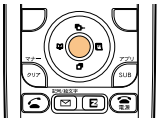

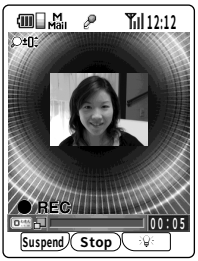

- The recording start tone sounds and the moving image which is being recorded appears.
- "●REC" appears while recording. When recording ends, you hear the recording end tone.
- Press (Play) to play back the recorded movie.
- Press クリア to re-record a moving image.
- The recording time is set to 5 seconds at the time of purchase. The movie can be recorded up to 15 seconds when setting is changed.

3 Press (Save).



- A message appears that the saving operation is in progress, and the movie is saved.

Information

- Movies are saved in the "MyMovie" folder of the Data folder.
- The title of the movie is saved in the form of "recording date _recording time˜consecutive numbers".
  For example, the title of a movie recorded at 12:12 on December 12, 2003, would be "031212_1212˜01".

Viewing Taken/Recorded Images

To display the taken/recorded images (photos or movies).

1 Press (📷/📹) in the Standby Screen and press SUB.

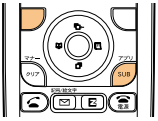

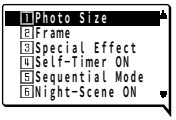

- Press and hold (📷/📹) for over a second in the Standby Screen to display the movie.

2 Use ● to select "MyPhoto Folder" or "MyMovie Folder" and press ● (OK).

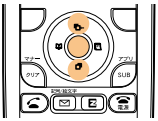

- The contents of the MyPhoto or MyMovie folder appears.

3 Use ● to select a taken/recorded date folder and press ● (Select).

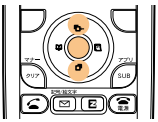

- The images taken or recorded on the selected date appear in reduced sizes.

4 Use ● to select the image and press ● (Select).

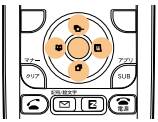

- The selected image appears.

Attaching a Photo or Movie to an E-Mail Message

Taken/Recorded images can be attached and sent.

1 Perform Steps 1 and 2 on pages 55 to 57 to take/record images.

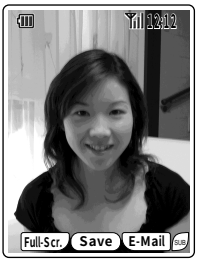

2 Press (E-Mail).

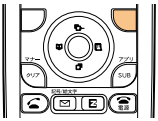

► The Mail Create screen appears with the image attached.

For the subsequnet procedure, see Steps 3 to 11 on page 42.

Photo Mail

The receiver can see images by using "Photo Mail" feature which automatically converts images to proper size/format (jpg, gif, png, etc.) when displayed on mobile phones other than au. To use the Photo Mail feature, you need to change the receiver's E-Mail address to the relevant Photo Mail address.

You can select "Photo Mail" under the automatic address transfer function (from the screen shown on the right) to have the receiver's E-Mail address automatically converted as follows.

Receiver	E-Mail address	Address after change
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@jp-✳.ne.jp △△△@✳.vodafone.ne.jp	△△△@jp-✳.nepm.jp △△△@✳.vodafone.nepm.jp
TU-KA or au not supporting movie mail	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

✳: differs depending on area.

EZweb (Internet)

A subscription is required to use the EZweb (Internet) service. Please contact an au Customer Service Center or an au shop if you did not subscribe for the service at the time of purchase.

Be sure to perform initialization before using the E-Mail and EZweb services. If you have not performed initialization yet, see page 20.

EZweb is a data service for enjoying the Internet via your mobile phone. The contents such as Ringer or latest news can be obtained from the information sites (homepages providing information).

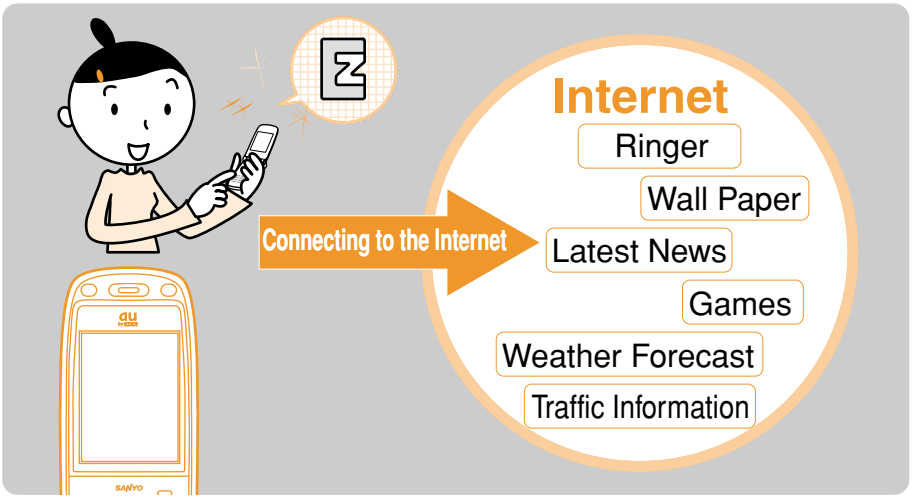

Information

The layout and contents of the screen are examples, and they may be changed.

Understanding Basic Operations

Let's access the EZ Top Menu which allows entrance to the Internet.

1 Press [EZ] in the Standby Screen.

► The EZ Menu appears.

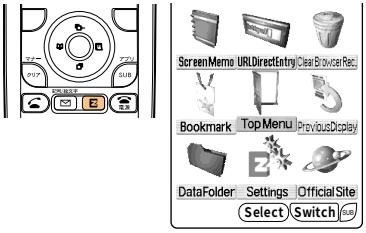

2 Use ● to select "Top Menu" and press ● (Select).

► The EZトップメニュー (EZ Top Menu) appears.

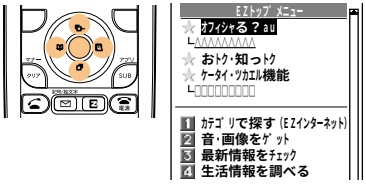

It may take some time to display the screen.

■Accessing informational sites

Use ● to select the informational site and press ● (Select).

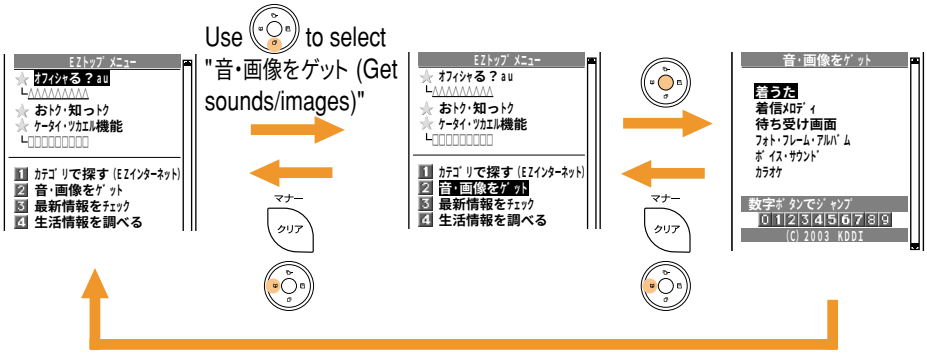

Press and hold マナー(クリア) or ● for over a second.

Press [電源] to return to the Standby Screen.

Information

Some informational sites may charge for the information they provide in addition to the transmission charge.

Viewing an Informational Site

The EZweb (Internet) can be accessed from the EZトップメニュー (EZ Top Menu). Many useful and entertaining informational sites (programs) can be accessed via the EZweb.

オフィシャる？au (Official? au)
Provides useful au information, such as the latest news on the EZweb.

おトク・知っトク (Lucky Chance)
Offers presents and prizes.

ケータイ・ツカエル機能 (Useful mobile phone features)
Entrance to recommended sites for fun and convenience.

カテゴリで探す（EZインターネット）(Search by category (EZ Internet))
Provides access to all official sites categorized.

音・画像をゲット (Get sounds/images)
Data such as EZ "着うた™", Ringers, and Standby Screen can be downloaded.

最新情報をチェック (Check the latest information)
Entrance to sites on news, weather reports and stocks.

生活情報を調べる (Check useful daily life information)
Entrance to sites providing daily life information.

ショッピングする (Shopping)
Shopping sites offering various products.

コミュニケーションする (Communication)
Entrance to greeting mail, bulletin boards and chat sites.

遊ぶ・楽しむ (Have fun)
Provides various information on recreation and having fun.

検索・数字でアクセス (Search/access by numbers)
Provides access to sites by entering keywords and Internet numbers.

料金・申込・インフォ (Charges, application and information)
Provides charge confirmation and au information services.

地域情報 (Regional information)
Provides information on specific districts.

解説付トップメニュー (Top menu with descriptions)
Provides the EZ Top Menu with descriptions.

The layout and contents of the screen are examples and may be changed.

Downloading Ringers

Example: Download the latest Ringer melodies and set them to the Ringer.

1 Press [EZ] in the Standby Screen.

► The EZ Menu appears.

2 Use ● to select "Top Menu" and press ● (Select).

► The EZトップメニュー (EZ Top Menu) appears.

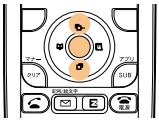

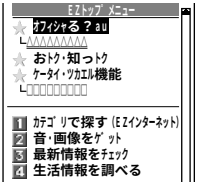

3 Use ● to select "音・画像をゲット (Get Sounds/Images)" and press ● (Select).

► The 音・画像をゲット (Get Sounds/Images) screen appears.

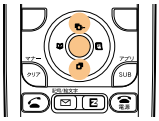

4 Use ● to select "着信メロディ (Ringer melodies)" and press ● (Select).

► The 着信メロディ (Ringer melodies) screen appears.

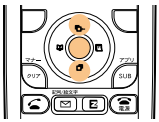

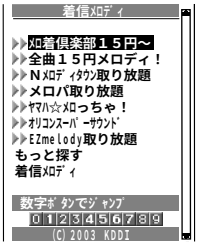

5 Use ● to select the site and press ● (Select).

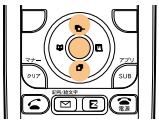

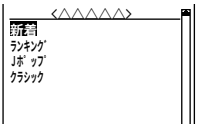

Continued on the next page

6 Use ⊙ to select the Ringer melody and download.

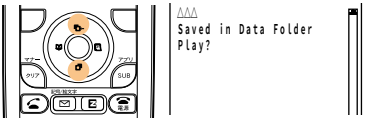

► Download following screen instructions.

EZ password is require to use the information site which charges information fee. Perform EZ password setting when using it for the first time. Please write down the EZ password.

7 Press ▭ (Play).

► The downloaded Ringer melody is played back.

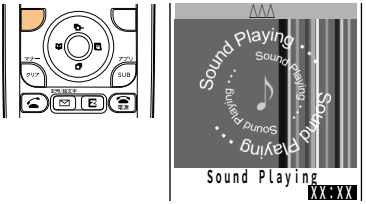

8 Press ⊙ (Set).

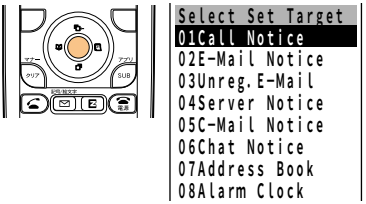

9 Use ⊙ to select "Call Notice" and press ⊙ (Select).

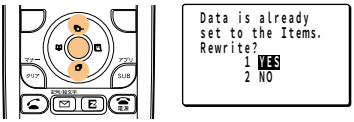

10 Use ⊙ to select "YES" and press ⊙ (OK).

► The Ringer is set.

Information

- The layout and contents of the screen are examples and may be changed.
- The downloading procedure used here is an example; it may be different from the actual procedure. Follow the instructions that appear on the screen.

Saving Frequently-Accessed Sites

Up to 100 frequently-accessed URLs can be saved.

1 Display the site to save and press アプリ SUB.

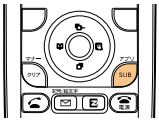

► The Browser menu appears.

2 Use ○ to select "New bookmark" and press ○ (Select).

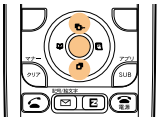

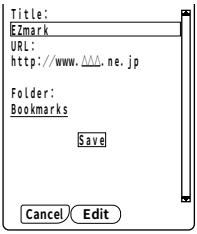

► The screen for saving the title and URL appears.

3 Use ○ to select "Save" and press ○ (Select).

Pressing ○ several times selects "Save".

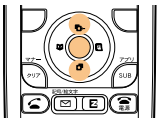

► The currently-displayed site is saved as a "Bookmark".

Some sites cannot be saved as "Bookmark".

Accessing Sites Saved as Bookmarks

Saved site as bookmarks can be loaded and accessed.

1 Press [EZ] in the Standby Screen.

► The EZ Menu appears.

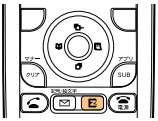

2 Use [●] to select "Bookmark" and press [●] ([Select]).

► The bookmarks appear.

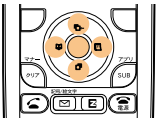

3 Use [●] to select the site and press [●] ([Go]).

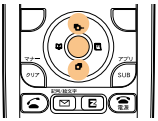

► The selected site appears.

Select the folder and press [●] ([Go]) when you saved bookmarks in folder divided.

Confirming Charges

Calls and transmission charges can be confirmed from the EZweb.

1 Press [EZ] in the Standby Screen.

► The EZ Menu appears.

2 Use ● to select "Top Menu" and press ● (Select).

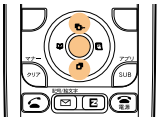

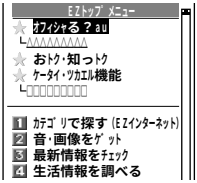

► The EZトップメニュー (EZ Top Menu) appears.

3 Use ● to select "料金・申込・インフォ (Charge, Application, and Information)" and press ● (Select).

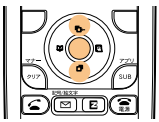

► The 料金・申込・インフォ (Charge, Application and Information) screen appears.

The list of toll sites you are currently using is available with the Toll service usage information feature. You may need an EZ password and/or a premium EZ password to use the Toll services.

4 Use ● to select "料金照会 (Charge Inquiry)" and press ● (Select).

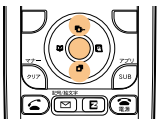

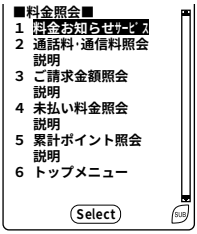

► The 料金照会 (Charge Inquiry) screen appears. Select the items to confirm.

The layout and contents of the screen are examples and may be changed.

How to use EZnaviWalk

A subscription for the EZweb (Internet) service is required to use the EZnaviWalk service. Please contact an au Customer Service Center or an au shop if you did not subscribe for the service at the time of purchase.

Be sure to perform initialization before using this function. If you have not performed initialization yet, see page 20.

The EZnaviWalk service can be of great help for an outing or when you are lost on the way to your destination.

Information

- You need the EZnaviWalk application to use this function. If you do not have it, it will be automatically downloaded when you access this function. Follow the instructions that appear on the screen.
- Registration with the EZnaviWalk service (a pay service) is required to use this service.
- The layout and contents of the screen are examples, and they may be changed.

Displaying a Map of the Place Where You Are

Display a map of the place where you are now.

1 Press ● (MainMenu) in the Standby Screen.

► The MainMenu appears.

2 Use ● to select "EZnaviWalk", and press ● (Select).

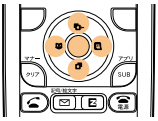

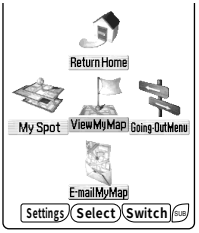

► The EZnaviWalk menu appears.

When you go out, use ● to select "Return Home" from the EZnaviWalk menu and press ● (Select) to search for the shortest route from the place where you are to your home, which may be a combination of routes by train and on foot.

3 **Use ◉ to select "View My Map", and press ◉ (Select). Select "はい" and then press ◉.**

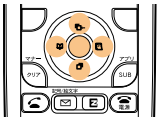

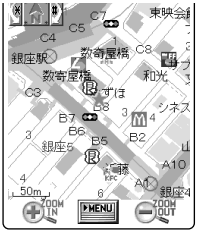

► A map of the place where you are now appears, which automatically scrolls as you move.

Operations on the map of the current location:

(ZOOM IN) : Zooms in on the map

(ZOOM OUT) : Zooms out on the map

◉ : Scrolls the map

*小 : Rotates the map counter-clockwise

#↵ : Rotates the map clockwise

Registering Your Home as the Place Where You Are

You can start navigation quickly by registering places that you frequently use under My Spots.

1 **Perform Steps 1 and 2 on page 68 to display the EZnaviWalk menu.**

2 **Use ◉ to select "My Spot", and press ◉ (Select).**

► The My Spot listing screen appears.

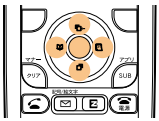

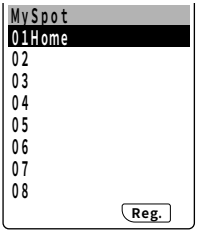

3 **Use ◉ to select "Home", and press (Reg.).**

► The registration method selection screen appears.

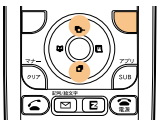

4 **Use ◉ to select "Update w/Now Plce", and press ◉ (OK). Obtain GPS information, and then press ◉ (Reg.).**

► This registers your home as the place where you are.

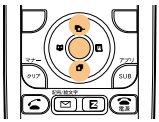

How to use FM Radio

A subscription for the EZweb (Internet) service is required to use the FM Radio service. Please contact an au Customer Service Center or an au shop if you did not subscribe for the service at the time of purchase.

Be sure to perform initialization before using this function. If you have not performed initialization yet, see page 20.

Connect the SANYO Flat-type Earphone 01 and enjoy FM radio.

Information

- This application may provide communications services. In that case, communications fees will be incurred. Also, some of the available menus provide pay services.
- The specifications are subject to changes without prior notice. Display contents in this document are examples.

Listening to FM Radio

You can listen to FM radio using the earphone cord as an aerial wire. Volume adjusting and tuning operations are available. FM radio broadcasts cannot be received without the accompanying SANYO Flat-type Stereo Earphone 01.

1 Press ● (MainMenu) in the Standby Screen.

► The MainMenu appears.

2 Use ● to select "FM Radio", and press ● (Select). Press ● on the confirmation screen.

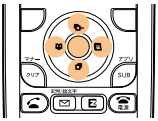

(FM Radio Screen)

► The FM Radio screen appears.

When you activate the FM Radio function for the first time, a screen appears where you can select an area. Select the area that you prefer.

Press ● (CLIP) to display information on the song you are hearing, including the artist name and the song title. Some programs may not provide this information service.

3 Use ○ for adjusting the volume, and ○ for tuning.

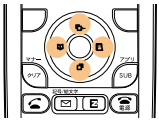

Notes on Volume Adjustment

The volume can be set in 10 levels from 1 to 10, or to mute.

Press ○ to increase the volume.

Press ○ to reduce the volume.

Press and hold ○ for over a second to set the volume to mute.

Notes on Tuning

Tuning can be performed in units of 0.1 MHz.

Press and hold ○ for over a second for automatic tuning.

4 Press 電源 to end FM Radio.

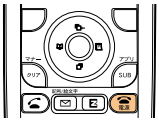



5 Select "End", and press ○ (OK).

Selecting "Halt" terminates EZappli while allowing you to continue to listen to FM radio. Selecting "End" terminates both EZappli and FM Radio.

Information

- At the time of purchase, the FM Radio function is set to be terminated automatically 2 hours after being started.
- Change the setting for the area to receive FM radio in a different area.
- When FM radio reception is not good enough, extend the earphone cord as much as possible.

Inputting Text

Let's understand how to enter characters.

Switching Over the Input Mode

On the character entry screen, press [ ] (Char.) to display the input mode selection screen.

Use [ ] to select an input mode and press [ ] (OK).

Entering Kana

0わを to 9WXYZら dial keys can be used to enter Kana characters. 1・@あ corresponds to "あ行", 2ABCか to "か行" and so on. The character displays as shown in the following table when press the key each time.

Example: The character to be entered displays in the order of "か", "き", "く", "け", "こ", "か", "き", and so on each time you press the 2ABCか key.

When the desired character is reached, press the key of the character to enter next.

Key	Number of pressing times											
	1	2	3	4	5	6	7	8	9	10	11	12
1・@あ	あ	い	う	え	お	ぁ	ぃ	ぅ	ぇ	ぉ		
2ABCか	か	き	く	け	こ							
3DEFさ	さ	し	す	せ	そ							
4GHIた	た	ち	つ	て	と	っ						
5JKLな	な	に	ぬ	ね	の							
6MNOは	は	ひ	ふ	へ	ほ							
7PQRSま	ま	み	む	め	も							
8TUVや	や	ゆ	よ	ゃ	ゅ	ょ						
9WXYZら	ら	り	る	れ	ろ							
0わを	わ	を	ん	ゎ	、	。	ー (macron)	・	～	!	?	Space
*゛゜小 □↔□	Switches to "゛" (voiced sound symbol), "゜" (semi-voiced sound symbol), Uppercase letters, or Lowercase letters (before entering the selected character)											
#↵ ⮌	Shifts selection from the character assigned to the key preceding the one you pressed (before entering the character), or inputs a line feed (after entering the character)											

■Entering same key character continually

After entering the first character, press ○ then the next key.

Example: Entering "あい"

■Entering "゛" and "゜"

Enter the character to which to add "゛" or "゜", then press ✱.

Example: Entering "ば"

(1) Press 6 once to enter "は".

(2) Press ✱ once.

Example: Entering "ぱ"

(1) Press 6 once to enter "は".

(2) Press ✱ twice.

■Erasing a character

Press クリア to erase a character.

Press and hold クリア for over a second to erase all characters after the cursor (▮). All characters are erased when the cursor (▮) is at the end of the text.

■Entering Hiragana characters

Enter characters and press ○ (Define).

Entering Kanji

Select Kana characters, and then convert the entry into Kanji.

Example: To enter "中川" as a name for the address book

1 Press [ ] (Char.) in the input screen.

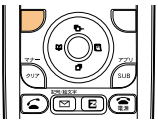

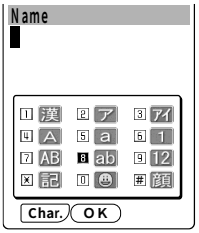

► The Enter Mode selection screen appears.

2 Use [ ] to select "漢" and press [ ] (OK).

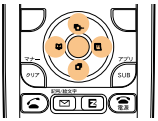

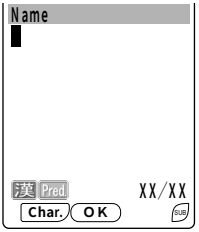

► The Name Input screen returns.

3 Enter "なかがわ".

Press [5 JKL な] once.

Press [2 ABC か] once.

Press [ ] once.

Press [2 ABC か] once.

Press [* ゛゜小] once.

Press [0 わをん ー] once.

► The Prediction candidates appear.

4 Use [ ] to select "中川" and press [ ] (Define).

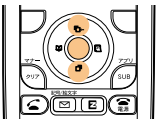

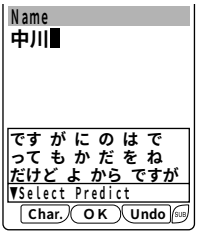

► The name "中川" is entered.

If "中川" is not included as a Prediction candidate, press [ ] (Convert) to switch to the usual Kanji conversion. Pressing [ ] displays the conversion candidates. Select "中川" and press [ ] (Define) to enter it.

Entering E-Mail Addresses

0わをん to 9WXYZら can be used for entering characters and numbers.

Example: Entering "taro@ezweb.ne.jp"

1 Enter "taro".

t: Press 8TUVや once.

a: Press 2ABCか once.

r: Press 7PQRSま 3 times.

o: Press 6MNOは 3 times.

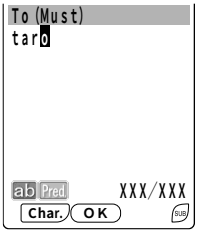

2 Press アプリ SUB.

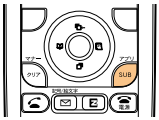

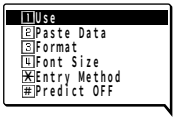

3 Use ● to select "Format" and press ● (OK).

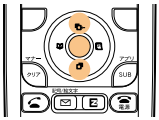

4 Use ● to select "Internet" and press ● (Select).

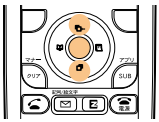

5 Use ● to select "@ezweb.ne.jp" and press ● (Select).

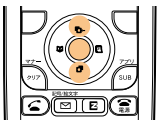

"@ezweb.ne.jp" is entered.

Press 1・あ@ once to enter "." and twice to enter "@".

■Keys available for E-Mail addresses

The character displays as shown in the following table when each time a key is pressed.

Key	Lowercase letter input mode								Uppercase letter input mode							
	Number of pressing times								Number of pressing times							
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
1・@あ	.	@	-	_	/	:	~	1	.	@	-	_	/	:	~	1
2 ABC か	a	b	c	2					A	B	C	2				
3 DEF さ	d	e	f	3					D	E	F	3				
4 GHI た	g	h	i	4					G	H	I	4				
5 JKL な	j	k	l	5					J	K	L	5				
6 MNO は	m	n	o	6					M	N	O	6				
7 PQR S ま	p	q	r	s	7				P	Q	R	S	7			
8 TUV や	t	u	v	8					T	U	V	8				
9 WXY Z ら	w	x	y	z	9				W	X	Y	Z	9			
0 わをん ゛゜ー	0								0							

Information

Up to 20 lowercase characters including "-" (hyphen) and "." (period) can be used for your E-Mail address. However, "." cannot be used continually or at the beginning or end of the address. Also, "0" cannot be used at the beginning of the address.

The characters and symbols in the gray cells ( ) cannot be used before the "@" as "△△△@ezweb.ne.jp".

Entering Pictographs

You can input pictographs.

1 Press (Char.) on the character entry screen.

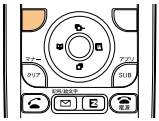

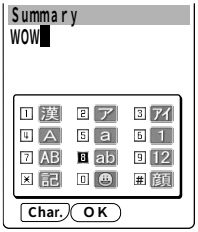

► The Enter Mode selection screen appears.

2 Use to select "" and press (OK).

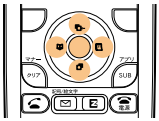

► The Pictograph input screen appears.

Press (Next) to switch to the next pictograph list.

3 Use to select the pictograph and press (Select).

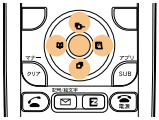

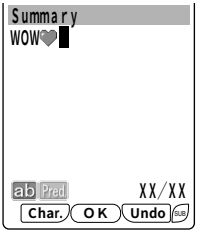

► The selected pictograph appears on the screen.

Inputting Fixed Expressions

You can input sentences and/or phrases that have been registered beforehand.

1 Press アプリ SUB on the character entry screen.

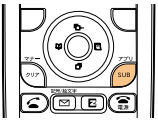

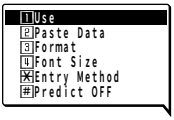

2 Use ● to select "Format", and press ● (OK).

► The Format category screen appears.

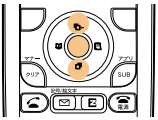

3 Use ● to select a category, and press ● (Select).

► The fixed expression selection screen appears.

Pressing (Detail) displays the fixed expression detail screen.

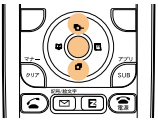

4 Use ● to select the fixed expression that you want to input, and press ● (Select).

► The fixed expression appears on the entry screen.

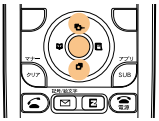

Troubleshooting

Symptom	What to confirm
Cannot turn the power ON.	Is the battery pack attached properly? ●Attach the battery pack properly.
	Is the battery pack charged? ●Charge the battery pack.
	Did you press and hold 電源 for over a second? ●Press and hold 電源 for over a second.
Cannot place a call.	Does Out appear on the screen? ●Extend the antenna and try placing a call again at a place where Out does not appear on the screen.
	Did you include the area code? ●If you are placing a call to any phone other than a mobile phone, include the area code, even when calling from the same city.
	Is the antenna extended? ●Hold the tip of the antenna and pull out until it stops.
	Is the power turned ON?
	Did you press ?
Cannot receive a call.	Does Out appear on the screen? ●Extend the antenna and move to a place where Out does not appear on the screen.
	Is the power turned ON? ●Press and hold 電源 for over a second.
Keys do not respond.	Is the power turned ON? ●Press and hold 電源 for over a second.
The power is turned off after an alarm sounds.	The battery pack level is low. ●Charge the battery pack.
Calls are answered automatically.	Is the Answer Phone set? ●Press and hold ⇨ バック/メモ for over a second to release the Answer Phone.
Cannot hear the other party's voice.	Is the Receiver Volume setting high enough? ●Press on calling. The receiver volume is raised.

Other Features

The A5503SA is provided with some other useful features.

Versatile Sub Displays on a Large Screen

You can check mail, operate the EZweb function, and do more with the terminal folded.

Full-fledged Mailing Features

Among various functions provided for fun, the "Pastel Mail" function enables you to send/receive vivid mail messages with a colored background and/or colored/blinking characters. With the "Chara Moji Mail" function, you can convert your message body data into images by downloading figure characters, and send the message as an attachment file even to third-party mobile phones.

Powerful Dictionary Features

English-Japanese, Japanese-English, and Katakana English term dictionaries are installed. Furthermore, you can download a dictionary from "SANYO ケータイプラネット" and use its entries when entering characters as conversion candidates. These dictionaries can be very useful as you can also translate English into Japanese and vice versa while entering characters.

Received Mail Filter to Shut Out Malicious C-Mail

You can reject mail reception by specifying senders' phone numbers and reject C-Mail from unknown senders.

Pocket Light

The A5503SA can be used as jacklight to light up outdoor garages, campgrounds or the keyhole at the entrance of your house at night.

with Disney!

You can convert the Wall Paper, Ringer, images on the send/receive screen, and the launcher menu into Disney characters all at once.

EZappli (BREW™)

You can enjoy various applications, including high-volume games rich in expressive features and standby applications. Also, EZnaviWalk provides you with FM radio and navigation services.

Photo Mixer

Used for adding a message to a still image (photo) taken or downloaded to easily create photo animation. The photo animation you create can be attached to E-Mail.

EZ "着うた™" supported (Ringer)

A segment of an artist's singing voice can be downloaded to be used as a Ringer or just for playback.

INDEX

A

Accessories **8**
Address Book **32**
Edit 36
Place a call 35
Register 32
Registering from the Outgoing/Incoming Calls 38
Address Filter **5,49**
Adjustment Receiver Volume **29**
Answer Phone **3,29**
Play Back 30
Erase 30
Record 29
Answer a Call **22**
Antenna **10,12**

B

Backside center key **10,17**
Backside cursor key **10,17**
Basic Operations **16**
Battery Pack **8,11**
Bookmarks **65,66**

C

Call Back **23**
Call Notice **13**
Center Key **10,16**
Charge the Battery Pack **11**
Confirm the Charge **67**
Cursor Key **10,16**
C-Mail **50**
Create and Send 51
Read 53,54

D

Desktop Holder **8**
Download **63**

E

Electric wave reception **4,13**
EZappli(BREW™) **80**
EZnaviWalk **68**
EZ Top Menu **61,62**
EZweb **60**
Basic Operations 61
Initialize 20
EZ「着うた™」 **80**
E-Mail address **21,40**
Enter the E-Mail Address 75
Change the E-Mail Address 40
E-Mail **39**
Attach the image (photo or movie) to an E-Mail and send it 59
Create and Send 42
Initialize 20
Reply 46
Read 45,48

F

Fixed Expressions **78**
Flexible Key **18**
FM Radio **70**
Font Size **13**

H

How to Use the Keys **18**

I

Icon **19**
ID Unsent **22**
Incoming Calls **23,38**
Incoming Illuminator **10,11**
Informational Sites **60,62**
Initialize **13,20**
Input Mode **72**
Inputting text **72**
Internet **60**

K

Kana **72**
Same Key Character 73
"゛" or "゜" 73
Kanji **74**

L

LockNo. **13**

M

Mail **39**
- C-Mail 50
- Create and Send C-Mail 51
- E-Mail 39
- Create and Send E-Mail 42

MainMenu **16**
Mail Filter **5,49**
Malicious Mail **5,49**
Manner Mode **3,28**
Manner **1**
Movies
- Attach to E-Mail 59
- Record 56
- View 58

N

Names of Each Part **10**
Number Notice **13**

O

One Ring Calls **5,23**
Outgoing Calls **23,38**

P

Pictographs **77**
Phone Number **21**
Photo Mixer **80**
Photos
- Attach to E-Mail 59
- Take 55
- View 58

Photo Mail **59**
Place a Call **22**
- Use the Address Book 35

Play Back
- Answer Phone 30
- Photo (Still Image) 58
- Movie (Moving Image) 58

Pocket Light **80**
Power **4,13**

R

Read the Received Mail
- Read the Received C-Mail 53,54
- Read the Received E-Mail 45,48

Remainder of a battery **4,13**
Ringer Melodies **63**
Ringer
- Adjust the Volume 26
- Change the Ringer 24

S

SANYO AC Adapter 03 ..... **8,11**
SANYO Flat-type Stereo Earphone 01 .... **8,12**
Set Language **14**
Site
- Access to Bookmark 66
- Save the Bookmark 65

Standby Screen **13,16**
Sub Display **10,17**
Sub Menu **17**

T

Top Menu **61,62**

U

Unsolicited Ad Mail Filter **5,49**
Use Camera **55**
- Take a Still Image (Photo) 55
- Record a Moving Image (Movie) 56

W

With Disney! **80**

For inquiries, call:

au Customer Service Center (General Information)

From regular phones:

0077-7-111

フリーコール

(toll free)

From au cellphones

157 area code not required

(toll free)

Sales：KDDI CORPORATION•
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by：SANYO Electric Co., Ltd.

モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

December 2003 Edition